

FORM FIT HOOD PROTECTOR

Chevrolet Optra 4 Door 2004 - 2007

HD 5U 04

Hardware Kit

- 5 – Large Bumpons
- 4 – 3M Anti-abrasion Film Pads
- 4 – Clip Bodies
- 4 – Pins
- 4 – # 6 x 5/8" Flat Head Screws
- 4 – 'L' Brackets

Tools Required

- 1 – Tape Measure
- 1 – Phillips Screwdriver #2



Installation

1. Be sure that the hood is clean and dry inside and out. Open the hood of the vehicle.
2. Install the bumpons as shown in Illustration #1. **Attention: The bumpons must be installed on the hood, not on the protector!!!** If the bumpons are installed on the protector, they will wear through the paint.
3. Center the protector on the hood, resting on the bumpons.
4. With protector centered on the hood, peel and fold an anti-abrasion film pad in half over the edge of the hood, underneath each of the two (2) inner holes in the protector. See Illustrations #2 – Step #4.
- 5.a) Place a clip over each of the anti-abrasion film pads on the edge of the hood as shown below in Illustration #2 – Step #5a.
b) Insert a pin through the protector into each of the clips. See Illustration #2 – Step #5b.
c) Insert a #6 x 5/8" screw through an 'L' - bracket and into the clip. See Illustration #2 – Step #5c & 5d.
d) Make sure all the components are well seated together, the protector is centered on the hood, and then tighten the screws into the clips.
6. **Repeat steps #4 & #5, for the other two (2) holes.**
7. On some vehicles it may be necessary to adjust the hood bumpers and/or latch for proper clearance.

Note: Do not pull on the protector when opening or closing the hood.

Care Instruction

Clean the protector with a mild soap and water solution or plastic cleaner only. Do not use chemicals or solvents. Periodically check to make sure that the bumpons is in place and that the protector is secure. **Avoid using automatic car washes.** Do not pull on the protector when opening or closing the hood.

Illustration #1: Bumpon Location


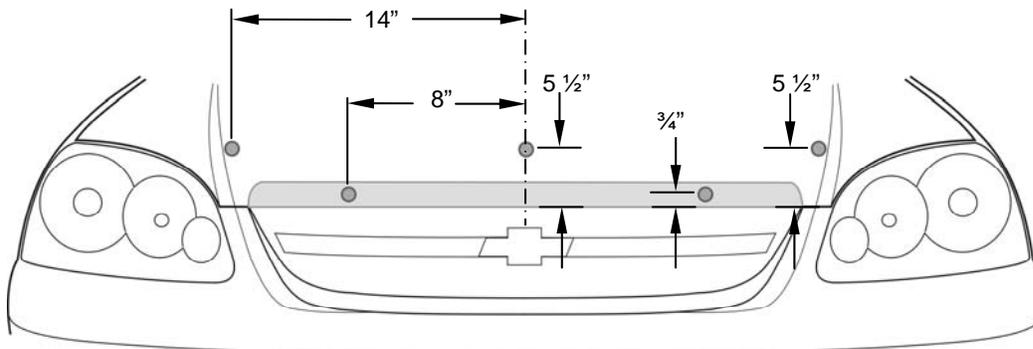


Illustration #2: Clip Location and Configuration – Patent Pending

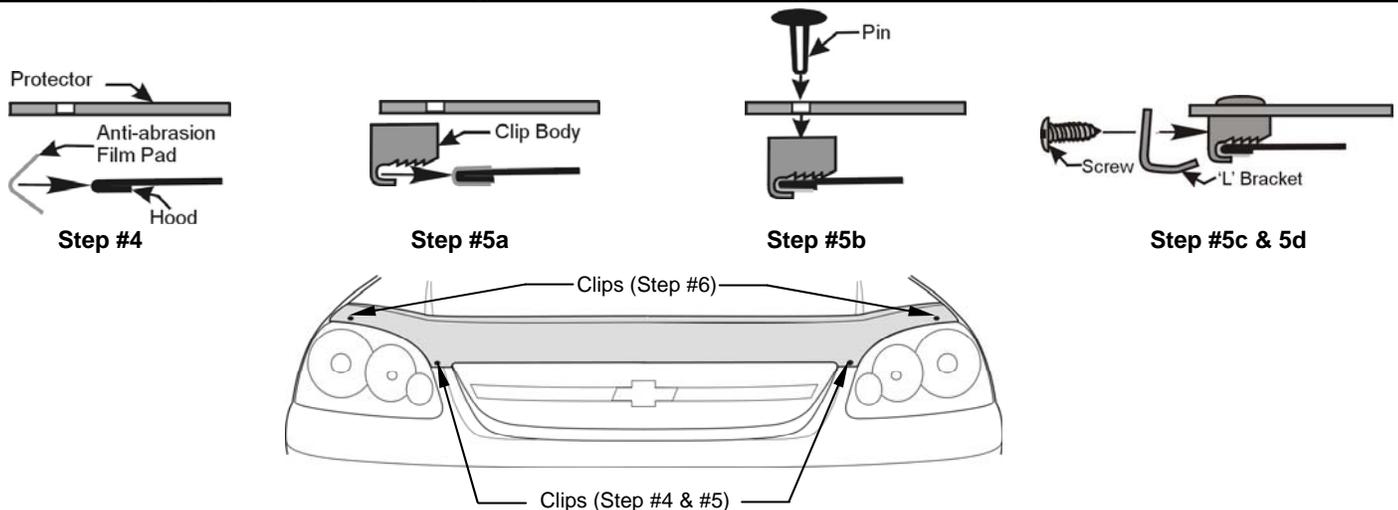

Thank you for purchasing a **FORM FIT** hood protector.
Retain this sheet for care instructions and kit information
Made in Canada

Rev1.100129

Sachet de fixation

- 5 – Grosses Butées
- 4 – Tampons anti-abrasifs 3M
- 4 – Agrafes noires
- 4 – Épingles noires
- 4 – Vis à têtes plate (n°6 x 5/8 po.)
- 4 – Braquets en forme « L »

Outils requis

- 1 – Ruban à mesurer
- 1 – Tournevis à embout étoilé n°2



Installation

1. S'assurer que le capot est propre et sec à l'intérieur comme à l'extérieur. Ouvrir le capot du véhicule.
2. Installer les butées sur le capot tel qu'indiqué à l'illustration n°1. **Attention : Les butées doivent être installées sur le capot et non sur le protecteur !!!** Si les butées sont installées sur le protecteur, elles useront la peinture.
3. Centrer le protecteur sur le capot restant sur les butées.
4. Peler et plier en deux les tampons anti-abrasifs sur la bordure avant du capot en dessous des (2) deux trous inférieurs. Voir l'illustration n°2 – étape n°4.
- 5.a) Monter une agrafe sur chaque tampon anti-abrasif sur la bordure du capot. Voir l'illustration n°2 – étape n°5a.
- b) Insérer une épingle au travers du protecteur et dans l'agrafe. Voir l'illustration n°2 – étape n°5b.
- c) Insérer une vis (n°6 x 5/8 po.) au travers du braquet en forme «L» et dans l'agrafe. Voir l'illustration n°2 – étape n°5c et n°5d.
- d) S'assurer que tous les composants sont bien installés sur le capot et serrer les vis dans les agrafes.
6. **Répéter les étapes n°4 et n°5 pour les autres trous.**
7. Sur certains véhicules, il peut-être nécessaire d'ajuster les butées du capot et (ou) la fermeture du capot pour obtenir un bon dégagement.
Important: Ne jamais se servir du protecteur pour ouvrir ou fermer le capot.

Instruction pour l'entretien

Nettoyer le protecteur avec une solution faite d'eau et de savon doux ou avec un nettoyant de plastique seulement. Ne pas utiliser de produits chimiques ou de dissolvants. S'assurer périodiquement que les butées sont toujours en place et que le protecteur est toujours bien retenu. Éviter de laver le véhicule dans un lave-auto automatique. Ne pas tirer sur le protecteur pour ouvrir ou fermer le capot.

Illustration n°1: Emplacement des butées


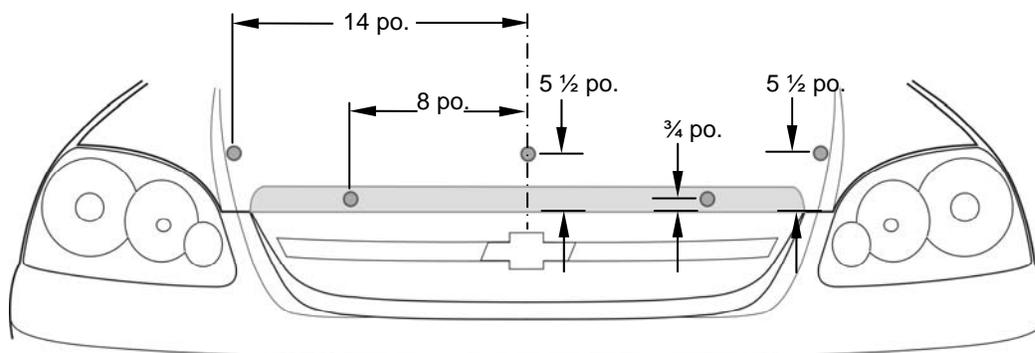


Illustration n°2: Configuration de l'agrafe – Brevet en instance

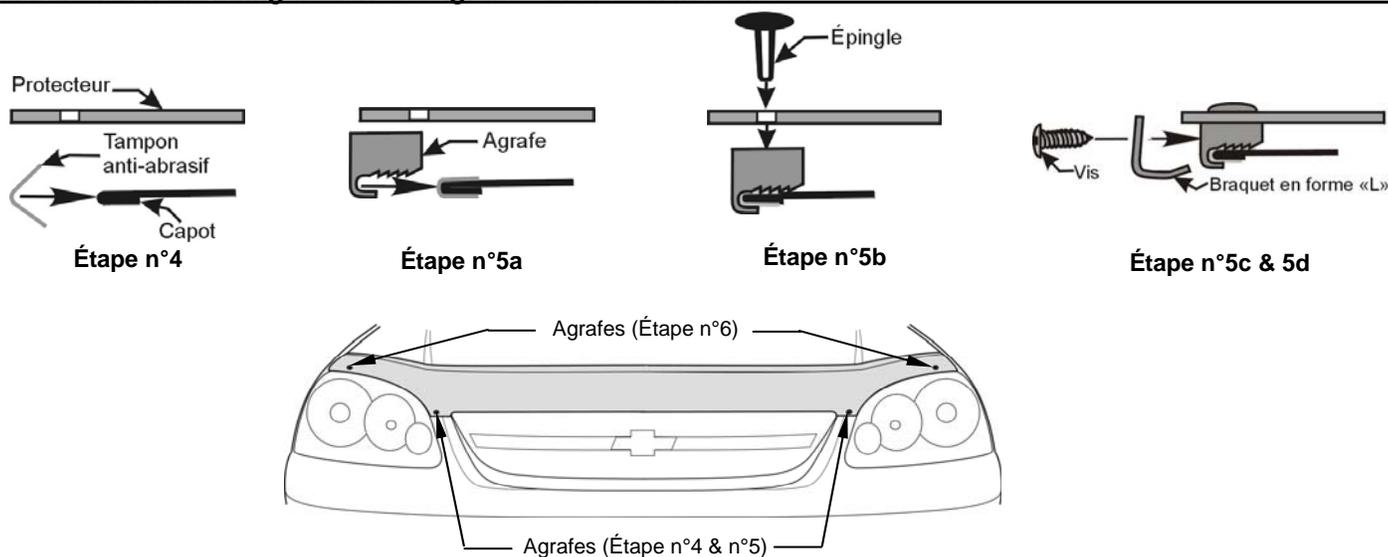

Merci de vous est procuré un protecteur **FORM FIT**.
Conserver cette feuille pour les instructions d'entretien et les renseignements concernant le nécessaire d'installation.
Fabriqué au Canada