Hyundai Elantra 2011 - HD 10E 11

Tools Required

1 - Tape Measure

1 - Phillips Screwdriver # 2

Hardware Kit

- 5 Large Bumpons
- 4 Anti-Abrasion Film Pads
- 4 Clip Bodies
- 4 Pins
- 4 # 6 x 5/8" Flat Head Screws
- 4 'L' Brackets
- 1 31" x 3/8" Gasket

Installation

- 1. Be sure that the hood is clean and dry inside and out. Release the hood, but do not open it.
- 2. Install the five (5) bumpons, on the hood as shown in *Illustration #1..* Attention: The bumpons must be installed on the hood not on the protector!!! If the bumpons are installed on protector, they will wear through the paint.
- 3. Peel protective backing from the roll of gasket material, and attach it to the underside leading edge of the hood as shown in the illustration #1.
- 4. Center the protector on the hood, resting on the bumpons.
- 5. Peel and fold the anti-abrasion film pads in half over the edge of the hood. Place them underneath the two (2) inner holes in the protector. See the *illustrations #2 Step 5*.
- 6. a) Place a clip over each of the anti-abrasion film pads. See illustration #2 Step 6a.
 - b) Insert a pin through the protector and into each of the clips. See illustration #2 Step 6b.
 - c) Insert the #6 x 5/8"screw through the 'L'- bracket and into the clip. See illustration #2 Step 6c & 6d.
 - d) Make sure all the components are well seated together and that the protector is centered on the hood. Tighten the screws into the clips.
- 7. Repeat step #5 and #6 for the remaining two (2) holes.
- 8. On some vehicles it may be necessary to adjust the hood bumpers and/or latch for proper clearance.

NOTE: Do not pull on the protector when opening or closing the hood.

Care Instruction

Clean the protector with a either a mild soap/water solution or utilize a plastic cleaner. Do not use chemicals or solvents. Periodically check to make sure the bumpons are in place and that the protector is secure. Avoid using automatic car washes.

Illustration #1: Bumpons and Clips Location


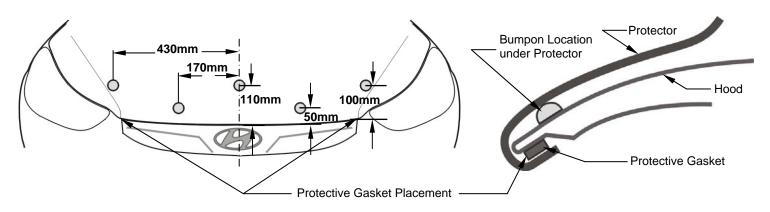


Illustration #2: Clip Configuration - Patent No. 6,892,427

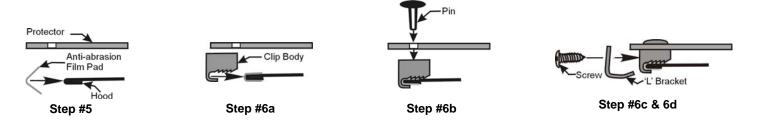

Thank you for purchasing a form fit hood protector. Retain this sheet for care instructions and kit information

Made in Canada Rev0.110908