

FORMFIT Side Visors

Installation Instructions

SD 12B19

Mercedes Sprinter 2019 -

HARDWARE KIT REQUIRED


2 – Automotive surface cleaner

TOOLS


Paper towel or clean cloth
Measuring tape

Attention: This product uses a 3M adhesive that requires installation and curing temperatures of at least 15° to 43°C (60 to 110°F) for 1 hour to develop maximum adhesion to the surface. The surface must be clean and free of contaminants. Failure to properly prepare the surface or failure to install this product at the proper temperature or allow adequate curing time before use is not covered under warranty.


1. The deflectors mount to the window frames of the vehicle. Ensure the mounting areas are clean, dry and at recommended temperature. Clean the mounting areas aggressively with alcohol wiping pad and dry with a clean cloth or paper towel to remove any finger prints, oils or waxes that may be on the surface
2. Test fit the deflectors to the door frames 19mm (3/4") from the edge of the door before attempting final installation.

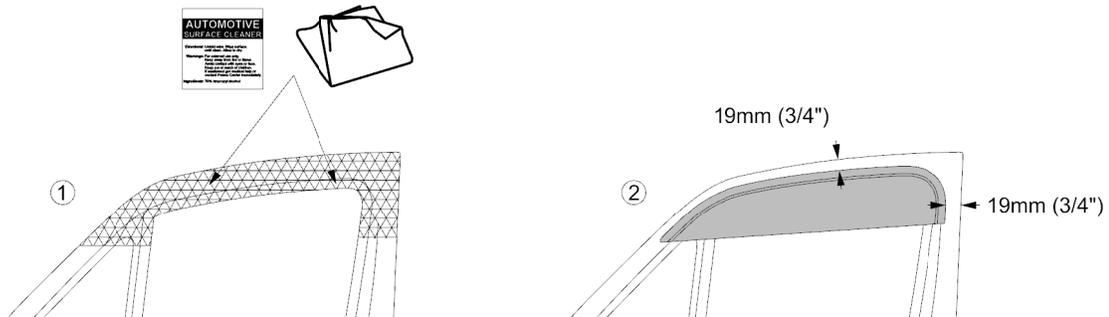

3. Starting at the back edge of one deflector, peel the first 5cm (2 inches) of the protective backing from the adhesive on the horizontal flange of the deflector. Peel the first 5cm (2 inches) of the protective backing from the vertical flange as well. Fold back the protective backing from the adhesive as shown in the illustration.

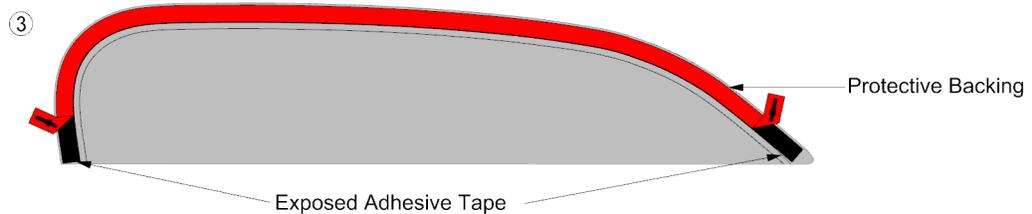

4. Reposition the deflectors to the door frames 19mm (3/4") from the edge of the door. If needed adjust the deflector for best fit.
5. While pressing the deflector into place, pull the protective backing out from between the deflector and door frame without disturbing the fit of the deflector.
6. Once the deflector is in place, press down hard along the entire mounting flange to ensure that the adhesive is fully adhered to the vehicle.

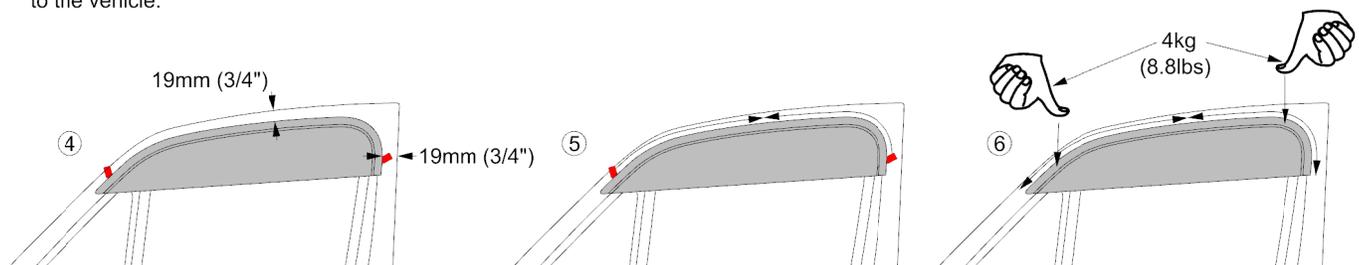

7. Repeat on opposite side.

NOTE: to ensure maximum adhesive bond do not wash your vehicle for 24 hrs.



Thank you for purchasing a **FORMFIT** side visors.
Retain sheet for Care Instructions and Kit Information.

FORMFIT Side Visors

Instructions d'installation

SD 12B19

Mercedes Sprinter 2019 -

KIT DE MATÉRIEL NÉCESSAIRE


2 - Nettoyant de surface automobile

OUTILS


Serviette en papier ou chiffon propre
Mètre ruban

Attention: Ce produit utilise un adhésif 3M qui nécessite des températures d'installation et de durcissement d'au moins 15° à 43°c (60 à 110F) pendant 1 heure pour développer une adhérence maximale à la surface. La surface doit être propre et exempte de contaminants. Le fait de ne pas préparer correctement la surface ou de ne pas installer ce produit à la bonne température ou de laisser un temps de durcissement adéquat avant utilisation n'est pas couvert par la garantie.


1. Les déflecteurs se montent sur les cadres de fenêtre du véhicule. Assurez-vous que les zones de montage sont propres, sèches et à la température recommandée. Nettoyez agressivement les zones de montage avec un tampon imbibé d'alcool et séchez avec un chiffon propre ou une serviette en papier pour enlever les empreintes digitales, les huiles ou les cires qui pourraient se trouver sur la surface.
2. Testez l'ajustement des déflecteurs aux cadres de porte à 19 mm (3/4") du bord de la porte avant de tenter l'installation finale

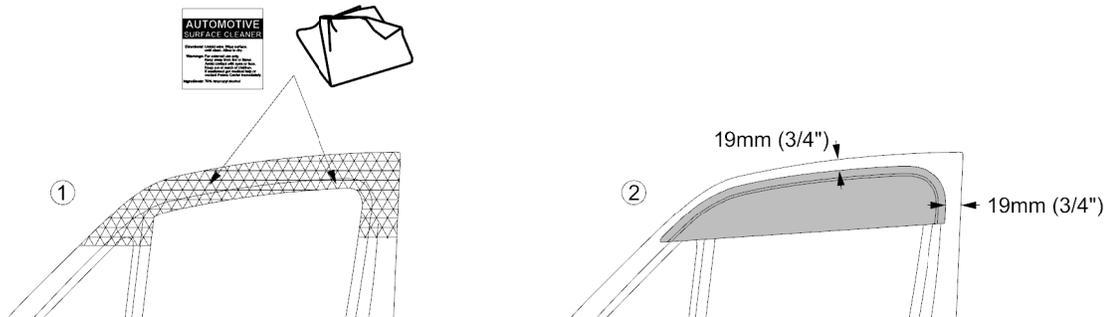

3. En commençant par le bord arrière d'un déflecteur, décollez les 5 premiers cm (2 pouces) du film protecteur de l'adhésif sur la bride horizontale du déflecteur. Décollez également les 5 premiers cm (2 pouces) du film protecteur de la bride verticale. Repliez le film protecteur de l'adhésif comme indiqué sur l'illustration.

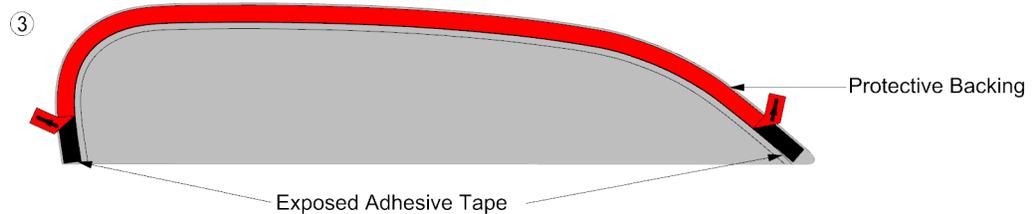

4. Repositionnez les déflecteurs sur les cadres de porte à 19 mm (3/4 po) du bord de la porte. Si nécessaire, ajustez le déflecteur pour un meilleur ajustement.
5. Tout en appuyant sur le déflecteur en place, tirez le support de protection entre le déflecteur et le cadre de la porte sans perturber l'ajustement du déflecteur.
6. Une fois le déflecteur en place, appuyez fortement sur toute la bride de montage pour vous assurer que l'adhésif adhère parfaitement au véhicule.

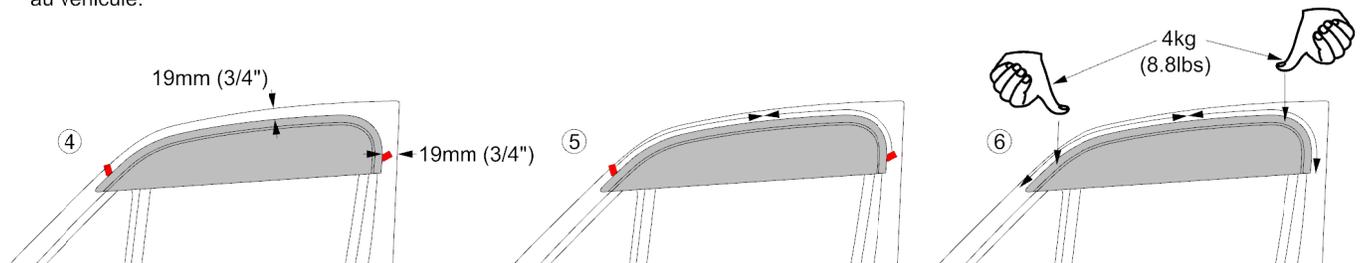

7. Répétez du côté opposé.

REMARQUE : pour garantir une adhérence maximale, ne lavez pas votre véhicule pendant 24 heures.



Merci d'avoir acheté une visière latérale **FORMFIT**.
Conservez la feuille pour les instructions d'entretien et les informations sur le kit.