

FORMFIT Side Window Visors

Installation Instructions

SD 13U17
Nissan Armada 2017 - up

HARDWARE KIT



- 8 – Plastic “E” clips
- 2 – Automotive surface cleaner
- 2 – 3M adhesion promoter ampule

TOOLS REQUIRED


- Paper towel or clean cloth
- Measuring tape

Attention: This product uses a 3M adhesive that requires installation and curing temperatures of at least 15° to 43°c (60 to 110F) for 1 hour to develop maximum adhesion to the surface. The surface must be clean and free of contaminants. **Failure to properly prepare the surface or failure to install this product at the proper temperature or allow adequate curing time before use is not covered under warranty.**

1. Attach the “E” clips to all 4 visor pieces. Note the orientation of the clip. See illustration.
2. The deflectors mount to the door frames of the vehicle. Ensure the mounting areas are clean, dry and at recommended temperature.
3. Test fit the deflectors to the door frames before attempting final installation.
4. Allow a 2mm gap at the mirror base and observe the distance from the back of the front door deflector to the door edge. The rear deflector should be set back from the door frame the same distance. Remove the deflectors.

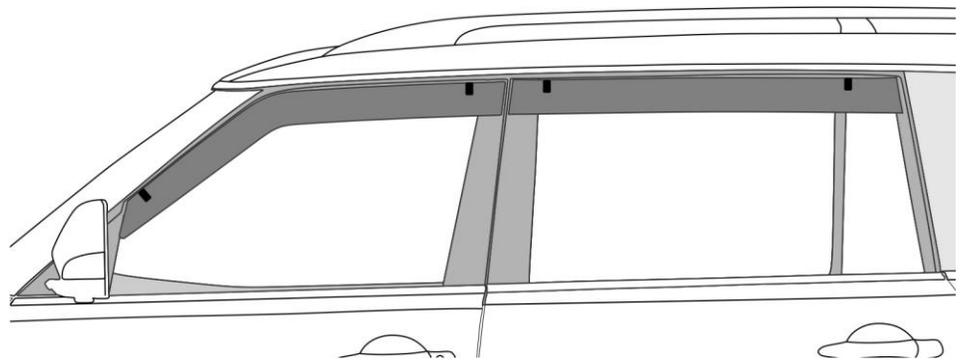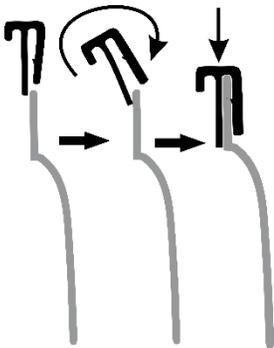

5. Clean the mounting areas aggressively with alcohol wiping pad and dry with a clean cloth or paper towel to remove any finger prints, oils or waxes that may be on the surface
6. Using the 3M adhesive promoter prime all the contact areas on the door frames where the visors mount. Allow to dry. Follow the instructions on the promoter for use.
7. Starting at the back edge of one deflector, peel the first 5cm (2 inches) of the protective backing from the adhesive on the horizontal flange of the deflector. Peel the first 5cm (2 inches) of the protective backing from the vertical flange as well. Fold back the protective backing from the adhesive as shown in the illustration.

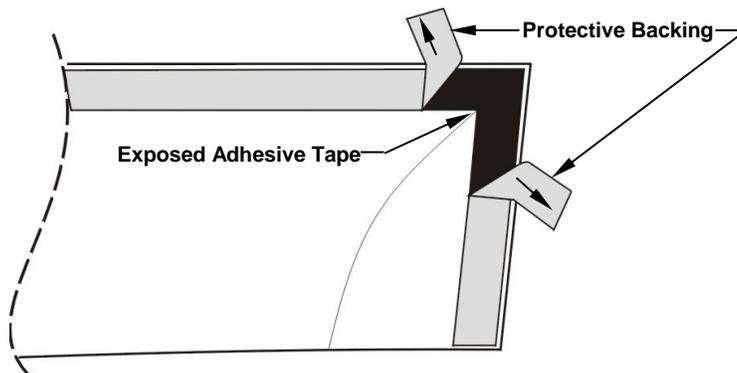

3M Primer 94 Instructions

- Squeeze tube in middle to break inner ampule
- Apply to clean, dry surface
- Allow at least 5 minutes to dry before taping

8. Reposition the deflector on the window frame as described in steps #2 and #3. Adjust the deflector for best fit. While pressing the deflector into place, pull the protective backing out from between the deflector and door frame without disturbing the fit of the deflector.
9. Once the deflector is in place, press down hard along the entire mounting flange to ensure that the adhesive is fully adhered to the vehicle.

NOTE: to ensure maximum adhesive bond do not wash your vehicle for 24 hrs. Inform the customer of this.

Thank you for purchasing **FORMFIT** side window visors.
Retain sheet for Care Instructions and Kit Information.



FORMFIT Fenêtre côté visières

Instructions d'installation

SD 13U17
Nissan Armada 2017 - up

SACHET DE FIXATIONS



- 8 – Pincen en plastique "E"
- 2 – Tampons imbibé d'alcool
- 2 – Promoteur adhésif 3M

OUTILS REQUIS


- Serviette en papier ou un chiffon propre
- Mètre ruban

Attention: Ce produit contient un ruban adhésif 3M. Il est nécessaire d'effectuer l'installation à une température d'au moins 20°C/ 70°F. Laisser 1 heures pour permettre à l'adhésion de se solidifier. **Une installation inadéquate annule la garantie.**

1. Fixez les pincen "E" sur les 4 visières. Notez l'orientation du clip. Voir illustration.
2. Les visières montent sur les cadres du véhicule de la porte. Vérifiez que les zones de montage est propre, sec et à température recommandée.
3. Tester adapter les visières aux cadres de porte avant de tenter l'installation finale.
4. Prévoir un écart de 2 mm à la base de miroir et d'observer la distance entre l'arrière de la visière de la porte d'entrée vers le bord de la porte. La visière arrière devrait être en retrait de la porte cadré la même distance. Retirez les visières.

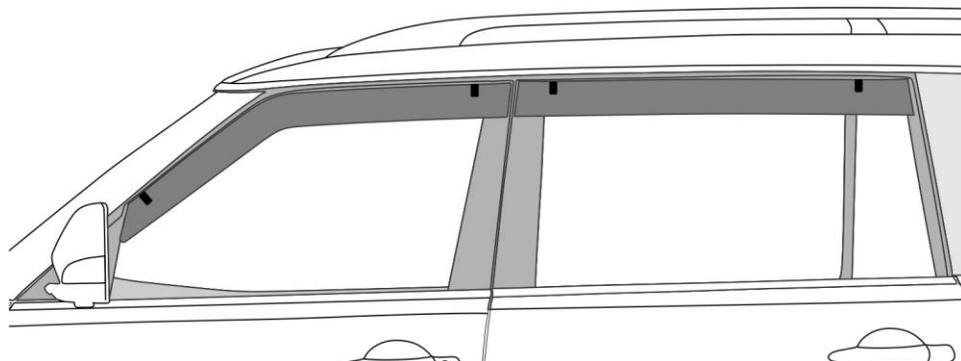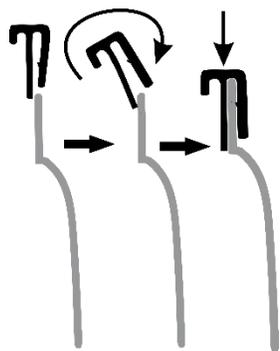

5. Nettoyez les zones de montage agressive avec un tampon d'alcool d'essuyage et séchez avec un chiffon ou une serviette en papier propre pour enlever toutes les traces de doigts, huiles ou cires qui peuvent être sur la surface.
6. En utilisant l'adhésif 3M organisateur premier toutes les zones de contact sur les cadres de fenêtres où le soleil et les socles de montage. Laissez sécher. Suivez les instructions de l'organisateur pour l'utiliser.
7. À partir de la partie arrière d'une visière, pelez la première 5cm (2 pouces) de la pellicule protectrice de l'adhésif sur l'aile horizontale de la visière. Pelez le premier 5cm (2 pouces) de la pellicule protectrice de la bride verticale. Replier la feuille de protection de l'adhésif, comme indiqué dans l'illustration.

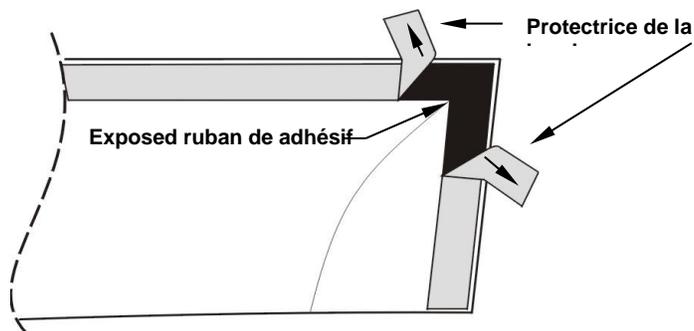

3M Primer 94 Instructions

- presser le tube au milieu de briser l'ampoule intérieure
- appliquer à nettoyer la surface, sec
- permettent au moins 5 minutes pour sécher

8. Repositionner la visière sur le cadre de la fenêtre, comme décrit dans les étapes # 2 et # 3. Ajustez la visière pour le meilleur ajustement. Tout en appuyant sur la visière en place, tirez le support protecteur à partir entre la visière et cadre de porte sans perturber l'accès de la visière.
9. Une fois la visière est en place, appuyez sur le bas dur sur toute la bride de montage afin d'assurer que la colle est pleinement respecté pour le véhicule.

REMARQUE: pour assurer une adhérence maximale adhésif ne pas laver votre véhicule pendant 24 heures. Informer le client de cette.

Merci d'avoir acheté un accessoire par **FORMFIT**.

Conserver cette feuille pour les instructions d'entretien et les renseignements concernant le nécessaire d'installation.