

Installation Instructions

Volkswagen Atlas 2018 - up

HARDWARE KIT

- 6 – Bumpons
- 2 – D gaskets (80 cm)
- 7 – Abrasion pads
- 1 – Automotive surface cleaner
- 7 – Mounting clips
- 7 – Pins
- 7 – Screws
- 7 – 'L' Brackets

TOOLS REQUIRED

- 1 – Phillips Screwdriver # 2
- 1 – Tape Measure


Imperial Conversion chart:

20mm = ¾ inch	25mm = 1 inch
70mm = 2 ¾ inches	300mm = 11 ¾ inches
80mm = 3 1/8 inches	310mm = 12 ¼ inches

INSTALLATION INSTRUCTION


- Ensure the hood is clean and dry inside and out.
- Install the bumpons on the hood as shown in *illustration #1*. **Attention: If bumpons are installed on the protector they will wear through the paint!!!!**

ILLUSTRATION #1 – BUMPON LOCATION

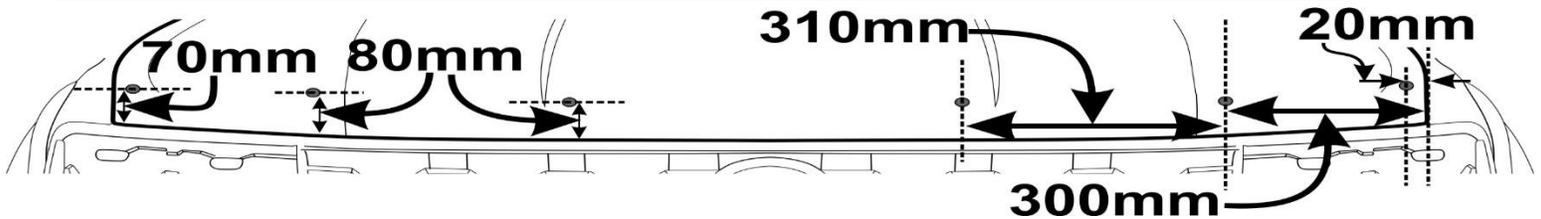

- Install D- Gasket as shown on *illustration #2* – Using automotive surface cleaner, thoroughly clean hood surface where D Gasket will attach and wipe dry with clean cloth or paper towel. Peel away gasket backing a little at a time when applying. Trim excess at hood edge if required. Repeat for passenger side.

ILLUSTRATION #2 – GASKET PLACEMENT




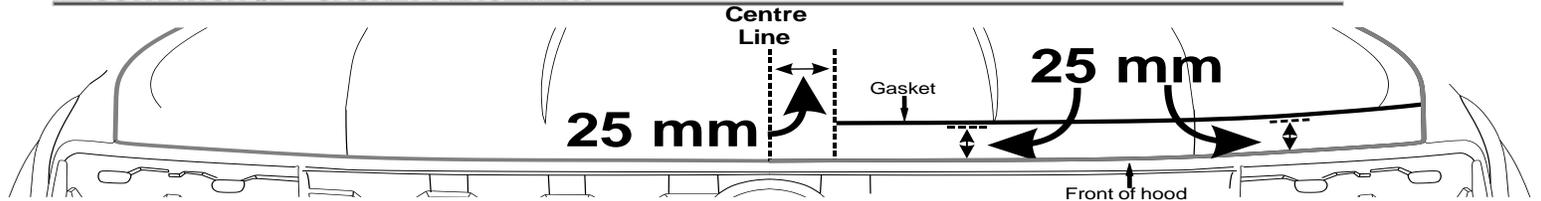


- Insert a pin through each of the three (3) holes in the hood protector above the grill and into a mounting clip. See *illustration #3 – Step 3*.
- Center the protector on the hood and rest it on the bumpons and mounting clips. *****Tip: The hood latch is centered on the hood and can be used as a guide to center the hood protector on the hood.*****
- Peel and fold three (3) abrasion pads in half over the edge of the hood under the three (3) mounting clips. See *illustration #3 – Step 5*.
- Starting with the innermost locations, insert a screw through an "L" bracket and into each of the three (3) mounting clips. See *illustration #3 – Step 6*.
- Ensure all components are properly seated together and that the protector is centered on the hood. Tighten the screws into the mounting clips. See *illustration #3, step 7*.
- Repeat steps #3, 5, 6 and 7 for the remaining four (4) holes over the headlights.**
- On some vehicles it may be necessary to adjust the hood bumpers and/or latch for proper clearance. *Never pull on hood guard to close the hood!

CARE INSTRUCTIONS

Clean the protector with a either a mild soap/water solution or utilize a plastic cleaner. Do not use chemicals or solvents. Periodically check to make sure the bumpons are in place and that the protector is secure. Avoid using automatic car washes.

ILLUSTRATION #2 – CLIP CONFIGURATION – PATENT No. 6,892,427

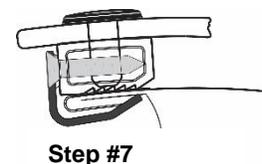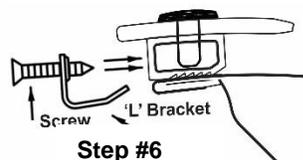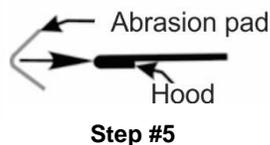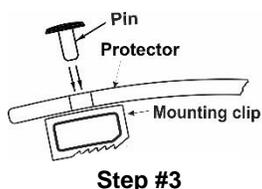

Thank you for purchasing a FormFit hood protector. Retain this sheet for care instructions and kit information.

Instruction d'installation

Volkswagen Atlas 2018 -

TROUSSE DE FIXATIONS

- 6 - Bumpons
- 7 - plaquettes d'abrasion
- 7 - Clips de fixation
- 7 - Goupilles
- 7 - Vis
- 7 - Supports 'L'
- 2 - D Joints (80cm)
- 2 - Nettoyant de surface


OUTILS REQUIS

- 1 - Tournevis Phillips # 2
- 1 - Ruban à mesurer

INSTRUCTIONS D'INSTALLATION


1. Assurez-vous que le capot est propre et séché à l'intérieur et à l'extérieur.
2. Installez les bumpons sur le capot comme indiqué dans l'illustration n° 1. Attention: si les bumpons sont installés sur le protecteur, ils se porteront à travers la peinture!

ILLUSTRATION N°1 – EMPLACEMENT DES BUTÉES ET DES FIXATIONS

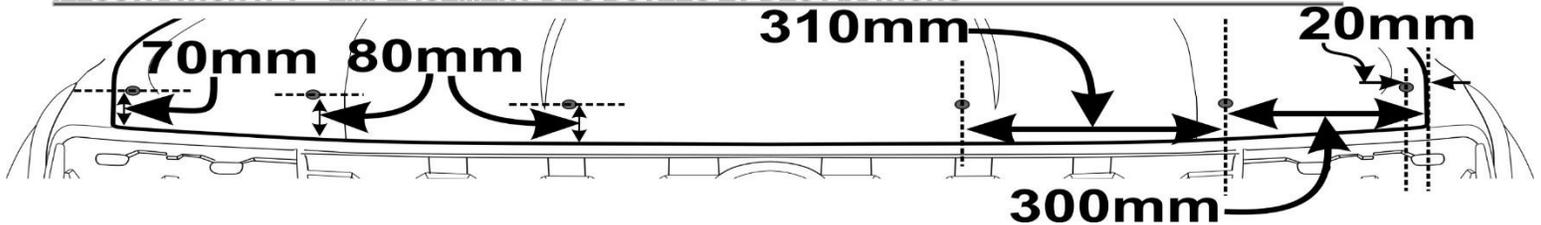

3. Installer D-joint comme insique sur illustration #2. En utilisant le nettoyant de surface automobile, nettoyer la surface de la capot ou D joint va attache et esswyer avec n chiffan. Decoller le protecteur de joint un pen a la fois lars de l'application. Couper le excs au bord de la capota necessaire.

ILLUSTRATION #2 – GASKET PLACEMENT

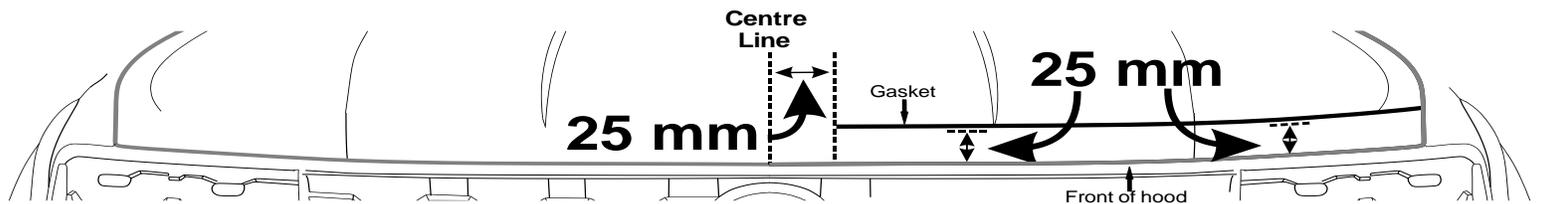


4. Insérez une goupille dans chacun des trois (3) trous du protecteur de capot au-dessus de la grille et dans une pince de montage. Voir l'illustration n° 3 - Étape 3.
5. Centrez le protecteur sur le capot et reposez-le sur les bumpons et les clips de montage.
6. Épluchez et pliez trois (3) plaquettes d'abrasion de moitié sur le bord du capot sous les trois (3) clips de montage. Voir l'illustration n° 3 - Étape 5.
7. À partir des emplacements les plus à l'intérieur, insérez une vis à travers un support "L" et dans chacun des trois (3) clips de montage. Voir l'illustration n° 3 - Étape 6.
8. Assurez-vous que tous les composants sont correctement assemblés et que le protecteur est centré sur le capot. Serrez les vis dans les clips de montage. Voir l'illustration n° 3, étape 7.
9. Répétez les étapes 3, 5, 6 et 7 pour les quatre (4) trous restants sur les phares.
10. Sur certains véhicules, il peut être nécessaire d'ajuster les pare-chocs du capot et / ou le loquet pour un dégagement approprié.

NOTE: Ne tirez pas sur le protecteur lors de l'ouverture ou la fermeture du capot.

INSTRUCTIONS POUR L'ENTRETIEN

Nettoyez le protecteur avec une solution d'eau et de savon doux ou avec un nettoyant de plastique seulement. Ne pas utiliser de produits chimiques ou de dissolvant. S'assurer périodiquement que les butées sont toujours en place et que le protecteur est toujours bien retenu. Évitez de laver le véhicule dans les laves-autos automatiques.


ILLUSTRATION N°3 – CONFIGURATION DE LA FIXATION – N° DE BREVET : 6.892.427

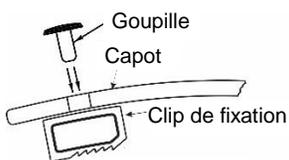


Étape #3



Étape #5

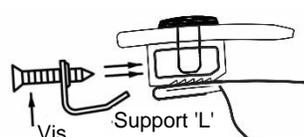

Étape #6

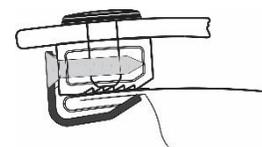

Étape #7

Merci de vous être procuré un protège capot en Form Fit.
Conservez cette feuille pour les instructions et les renseignements concernant le nécessaire d'entretien.