


KIT CONTENTS:





Automotive surface cleaner (1)

Tape strip sheet (1)

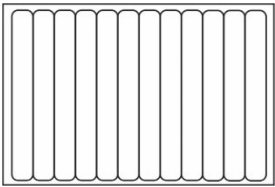


Large Anti-Abrasion Film Pad (3)

Small Anti-Abrasion Film Pads (2)

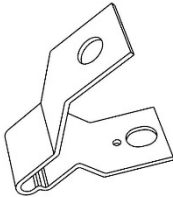


Type A Metal Bracket (1) [Marked with dot]

Type B Metal Bracket (2)

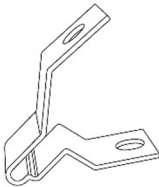


Type C Metal Bracket (2)




Square Bumpons (2)

Round Bumpons (4)  
Type B Adhesive Pedestal (6)

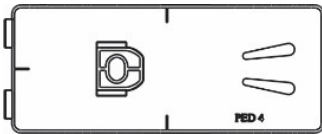

Type A Adhesive Pedestal (2)

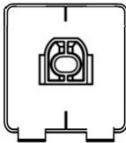

Screws (8)





Push Type Retainer (6)


Pins (8)



Hood deflector (1)

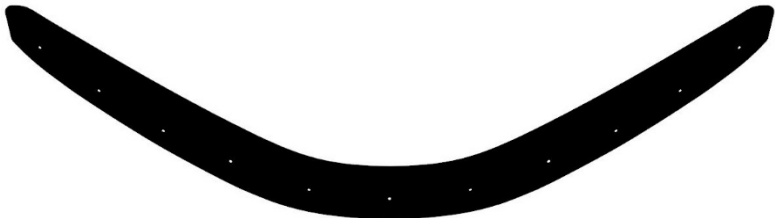


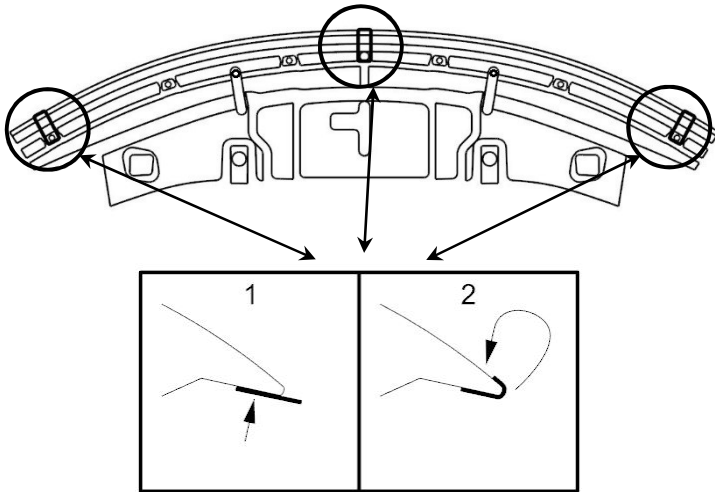

1. Be sure that the hood is clean and dry inside and out.
  2. Open the hood of the vehicle.
-  Peel and fold anti-abrasion film pads in half over the edge of the hood, in the two (2) locations shown.


**Looking at underside of the hood**  
anti-abrasion film pad locations

#### **Metal mounting bracket guide**

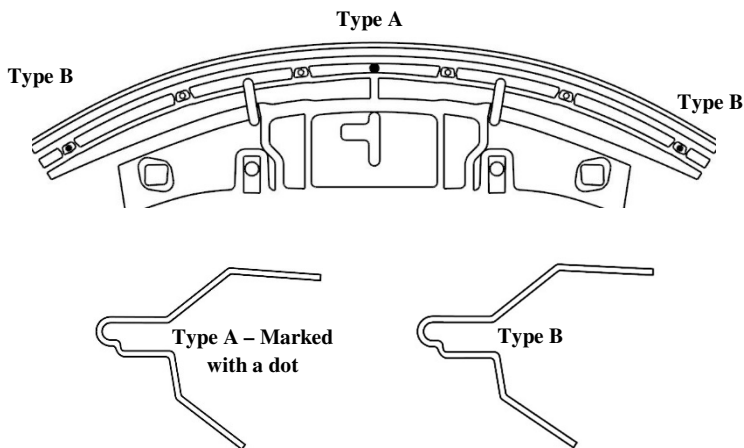


#### **NOTE:**

**Use the metal mounting bracket guide** to determine where the metal mounting brackets are installed in the following steps.

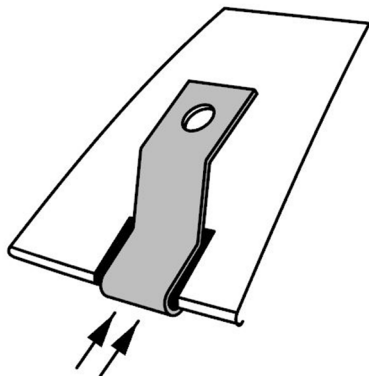


3. Install the one (1) Type A & two (2) Type B Metal brackets on the hood edge over the anti-abrasion pads.

Align the hole in the bottom leg of the bracket with the round hole in the hood.

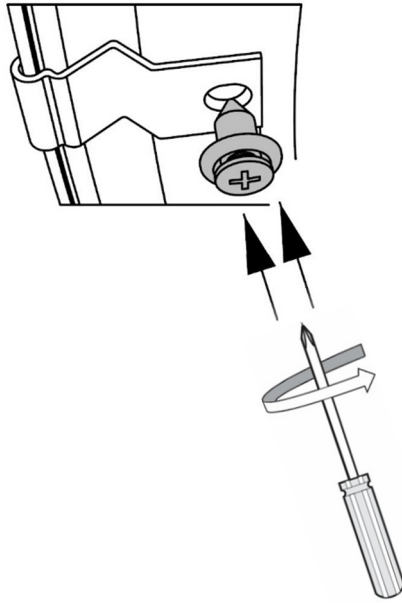

4. Insert a push type retainer through the Type A metal mounting bracket, and into the hood.

**!** Ensure the leg of the bracket is well seated against the surface of the hood and **push the center pin of the retainer assembly using a #2 Phillips screwdriver followed by tightening 90 degrees** to fully engage the retainer into the hood and lock it into place.

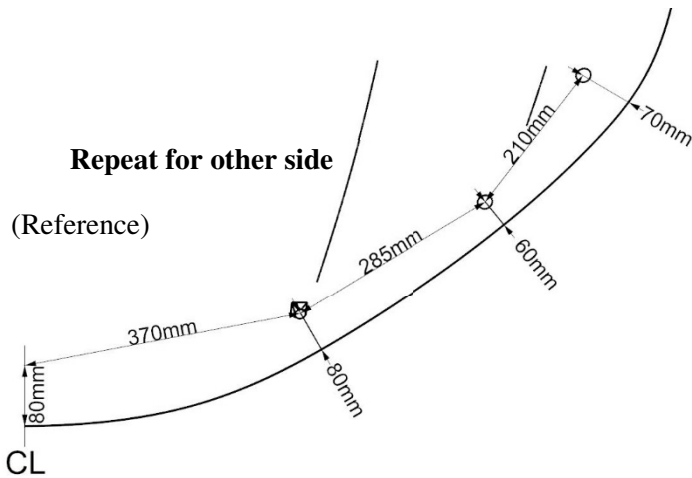


5. Install the six (6) bumpons in the locations shown.

**ATTENTION:**



**!** **Bumpons must be installed on the hood, not on the hood deflector!!!** If the bumpons are installed on the hood deflector, they may wear through the vehicle paint.

**NOTE:**

Locate the square bumpons closer to the center line as shown.


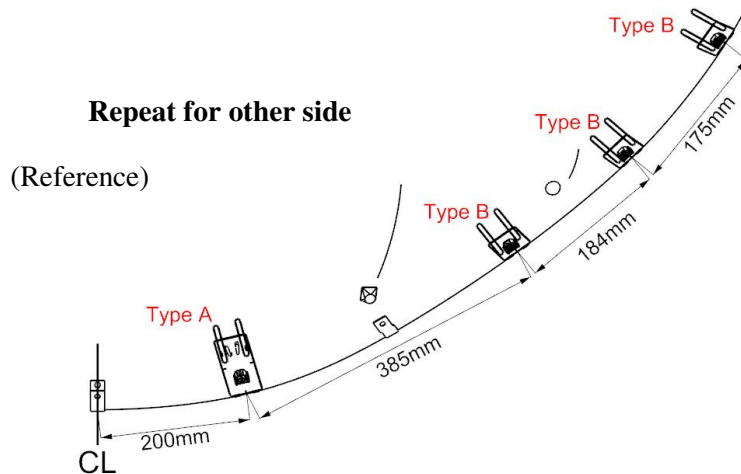


6. Dry fit the Type A+B pedestals using the supplied tape strips or masking tape to temporarily hold them in position.

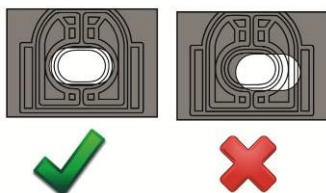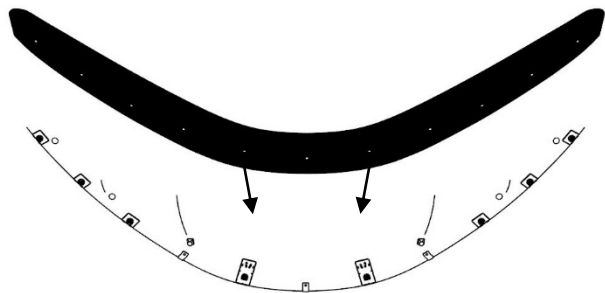

7. Place the hood deflector temporarily onto the Type A+B Metal Brackets and align the holes in the hood deflector with the holes in the metal brackets. This will allow for checking the position of the adhesive pedestals and any readjustments if necessary.

8. Remove the hood deflector and outline the perimeter of the Type A+B Adhesive Pedestals with masking tape or tape strips to help with final installation.

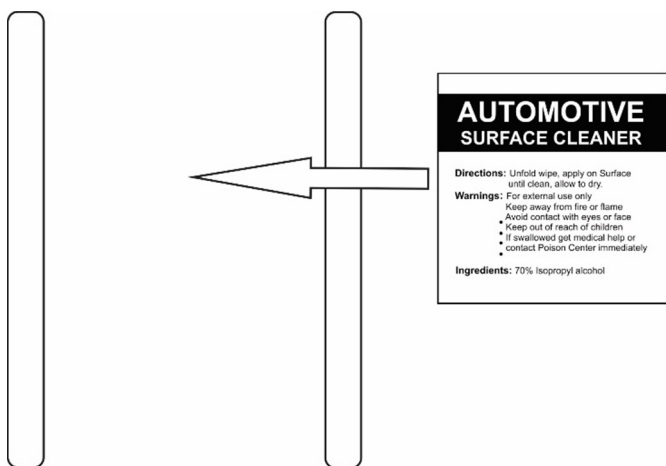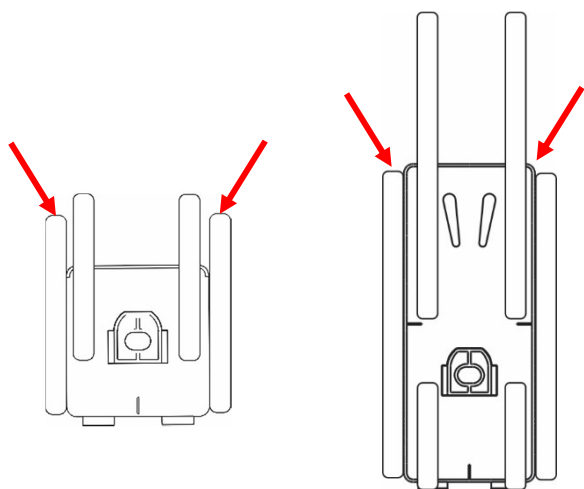


9. Remove the Type A+B pedestals and thoroughly clean the outlined area with automotive surface cleaner. Wipe dry with a clean cloth or paper towel. This will insure all wax, finger prints, and oils are removed from the hood surface in the bonding area.


### IMPORTANT:




Proper preparation of the hood surface will ensure maximum adhesive bond.

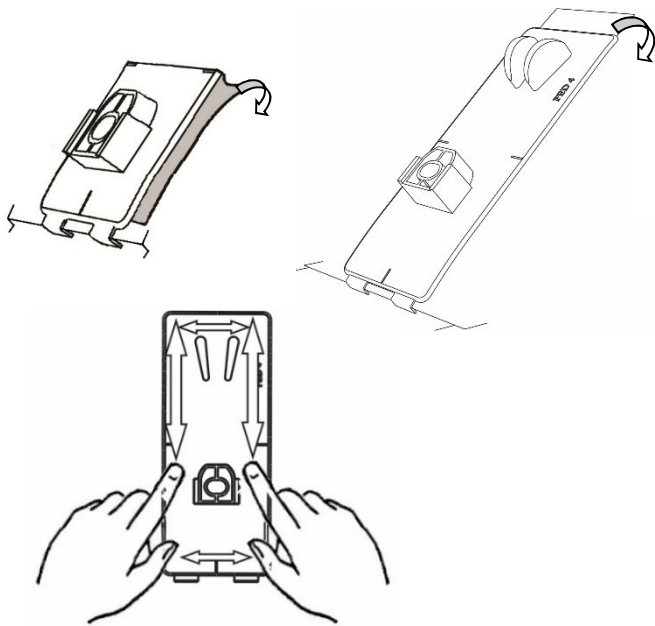


10. Remove the protective backing from the Type A+B Adhesive Pedestals and install on the hood surface.


**CAUTION:**  
 Avoid contaminating the adhesive surface.

**TIP:**  
 Hook the fingers of the pedestal over the hood edge and rotate the unit into position. After installation, remove the masking tape or tape strips and “wet out” the adhesive to the hood surface by applying pressure with your thumb around the surface of the pedestals.


**IMPORTANT:**  
 “Wetting out” of the adhesive pedestals will ensure maximum adhesive bonding.

11. Start a screw into each Type A+B Adhesive Pedestal a few turns.


**NOTE:**  
 The tip of the screw must not protrude into the hole where the attachment pin will install later.

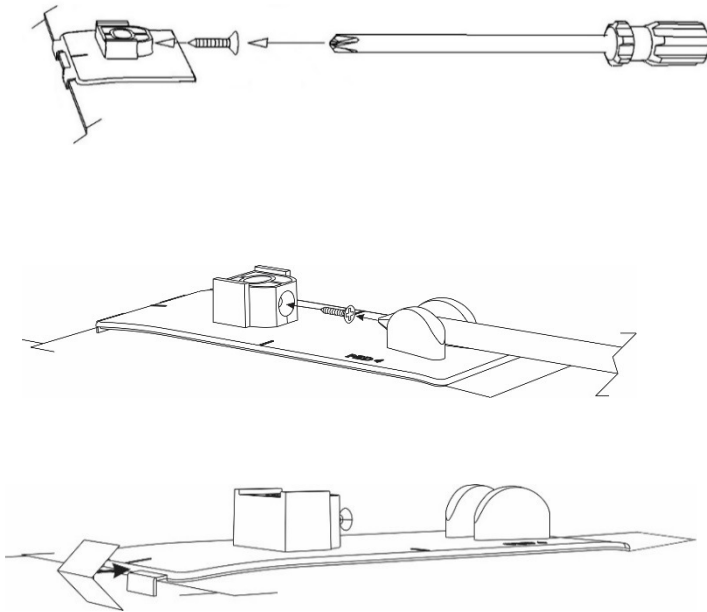

12. Peel and fold a small anti-abrasion film pad in half over the hood edge between the fingers of each Type A Adhesive Pedestal.

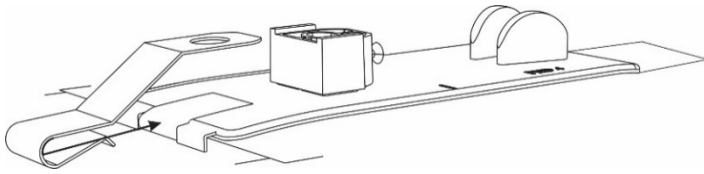


13. Push a Type C Metal Bracket over the hood edge on top of the anti-abrasion pad installed in the previous step. Ensure the bracket is fully engaged over the hood edge and the hole in the bracket is aligned with the hole in the Type A Adhesive Pedestal.

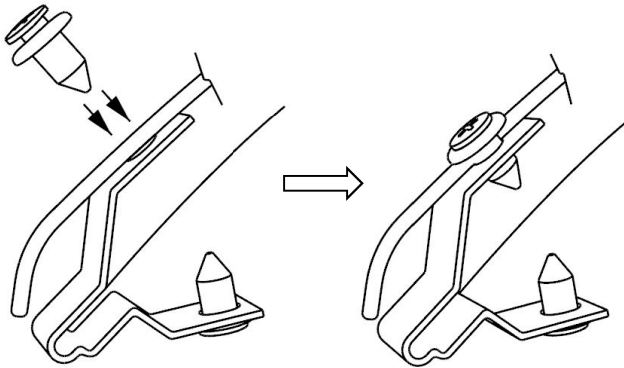


14. Place the hood deflector on the hardware mounted to the hood and align the two (2) holes in the hood deflector with the holes in the Type A metal mounting brackets.

Insert a push type retainer through the hole in the hood deflector and into the bracket.

- ⚠** Ensure the hood deflector is well seated against the metal bracket and **push the center pin of the retainer assembly using a #2 Phillips screwdriver followed by tightening 90 degrees** to fully engage the retainer into the bracket and lock it into place.

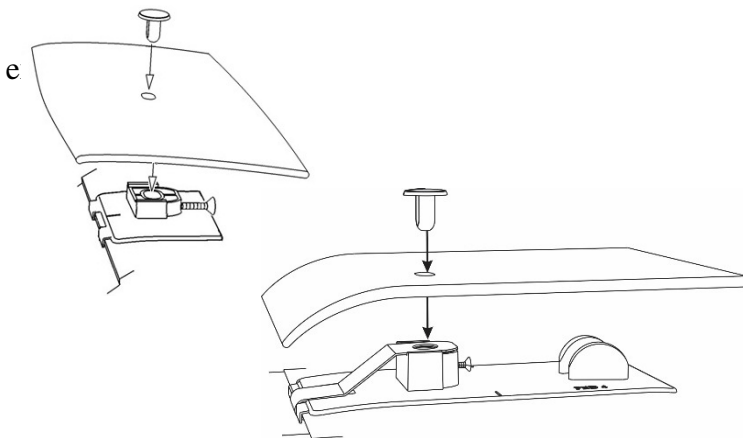

15. At the Type A+B Adhesive Pedestal. locations, drop a pin through the hood deflector and into the pedestal.

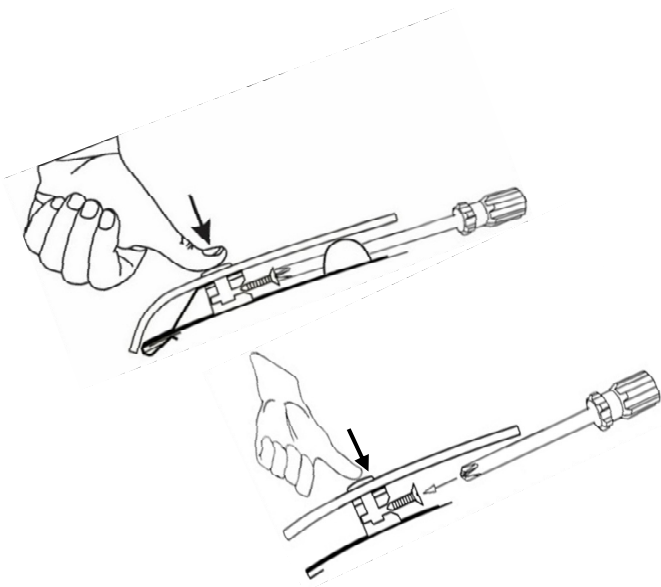

16. Tighten the screw while maintaining slight pressure on the pin, to ensure proper seating of the components.

**CAUTION:**



Use care to avoid damaging the vehicle surface while tightening the screws.

**NOTE:**

Proper installation of the adhesive pedestal system requires the use of a Phillips #2 screwdriver (preferably with a long shaft). Use of the correct screwdriver will facilitate a trouble-free installation. Do not attempt to use a Phillips #1 screwdriver or smaller, or any type of electric screwdriver.