

FORM FIT Hood Protector

Installation Instructions


HD 24A16
Lexus RX / RXH (2016-2022)

Hardware Kit Contents



Metal Mounting Bracket
Type A *with hole* (1)

Anti-Abrasion Pads (7)



Metal Mounting Bracket
Type B (2)

Round Bumpons (4)



Metal Mounting Bracket (4)

Black Bumpons (3)



Clip Bodies (4)

Screws (4)



Push-Type Retainer (6)

Pins (4)



Hood Protector (1)



Tools Required

- #2 Phillips screwdriver
- Masking tape
- Clean cloth or paper towel
- Measuring tape

Thank you for the purchase of a **FORM FIT** Hood Protector.
If you have any questions regarding the product, please email us at customer@focusauto.com.


Installation Procedure

Note: Vehicle surface temperature should be a minimum 15 degrees celcius or 59 degrees fahrenheit.

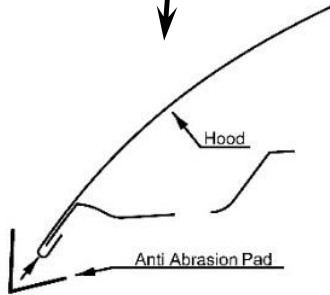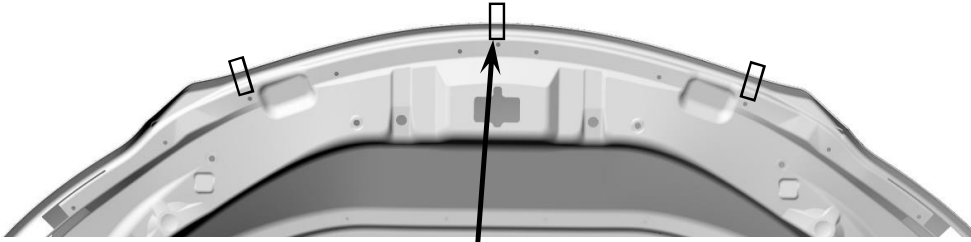


1. Be sure that the hood is clean and dry inside and out.
2. Open the hood of the vehicle. Peel and fold the anti-abrasion pads in half over the edge of the hood, in line with the three holes under the hood.


Metal Bracket Guide

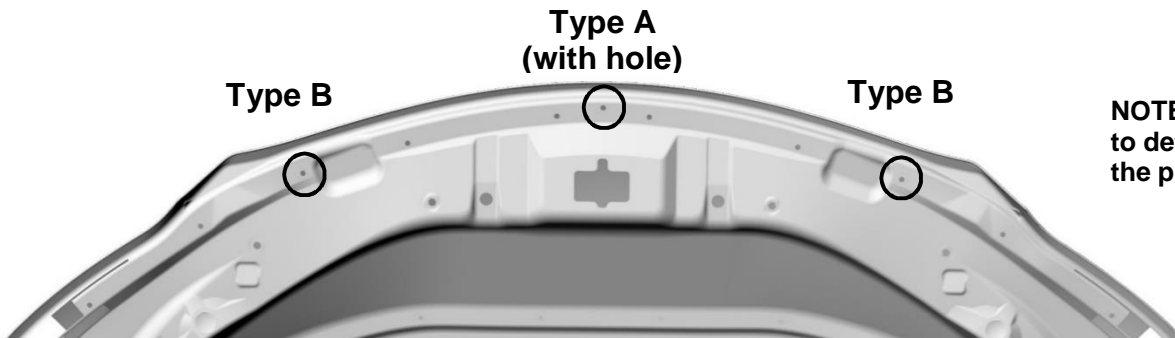

NOTE: Use the Metal Bracket Guide to determine which brackets go in the proper locations.

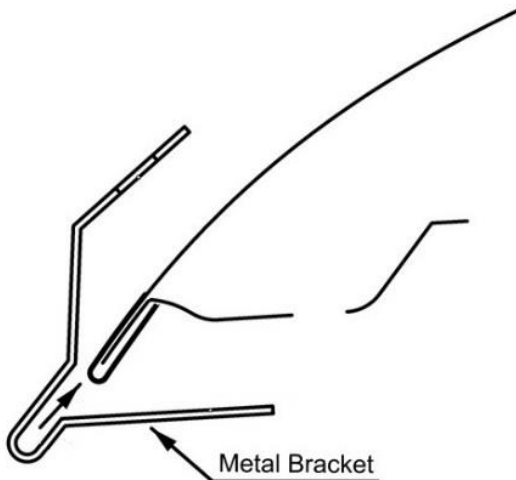


3. Install the (3) metal brackets on the hood edge over the anti-abrasion pads. Align the hole in the bottom leg of the bracket with the round hole in the hood.

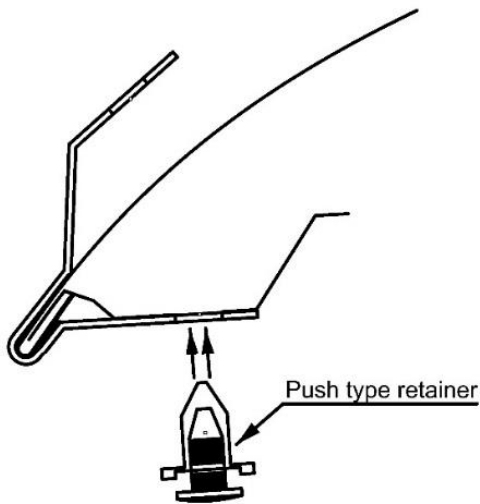


4. Insert 3 of the “push-type retainers” through the hole in the metal bracket, and into the hood.

Ensure the metal bracket is seated against the hood, push the center pin of the retainer followed by tightening 90 degrees to fully engage the retainer into the metal bracket. Repeat for the remaining metal bracket locations.

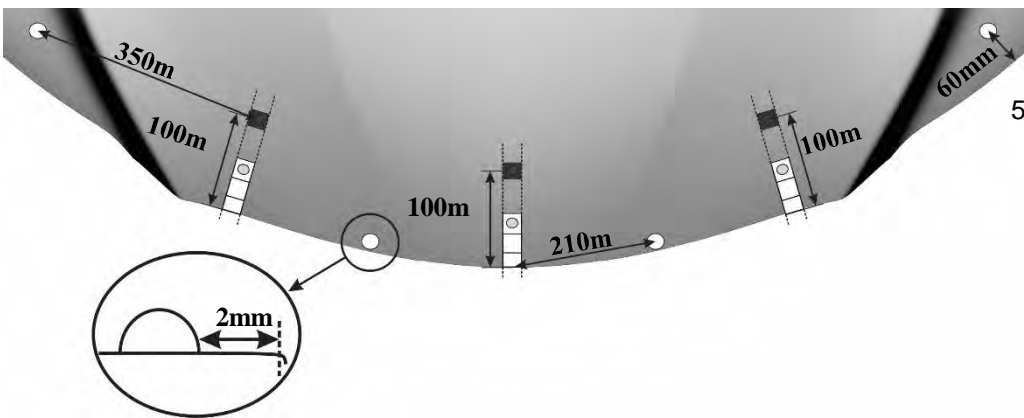


5. Install the (3) black bumpons behind the (3) metal brackets and then the (4) round bumpons as shown.

Attention: Bumpons must be installed on the hood, not on the deflector.

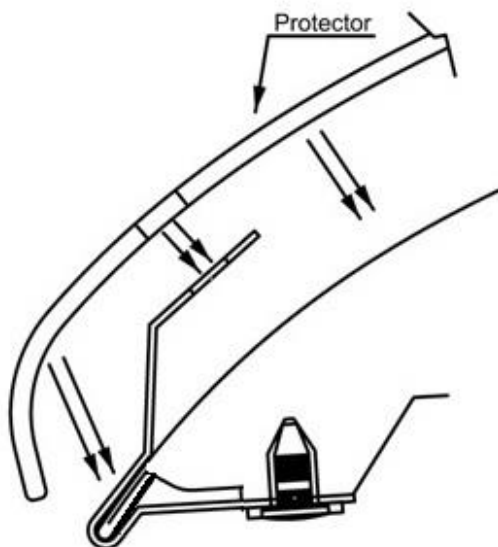


6. Place the hood protector on the hood, resting on the (3) metal brackets.

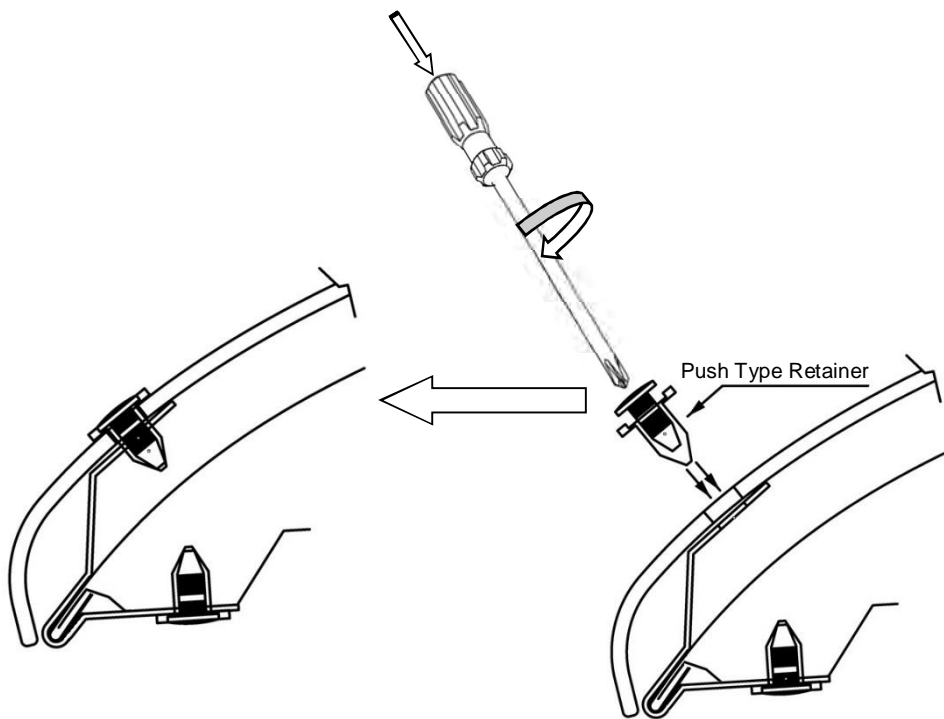


7. Align the 3 holes in the protector with the holes in the metal brackets.

- Insert the 3 remaining push-type retainers through the hole in the protector, and into the bracket.
- Ensure the protector is seated against the metal bracket, push the center pin of the retainer followed by tightening 90 degrees to fully engage the retainer into the metal bracket.


Repeat for the remaining metal bracket locations.

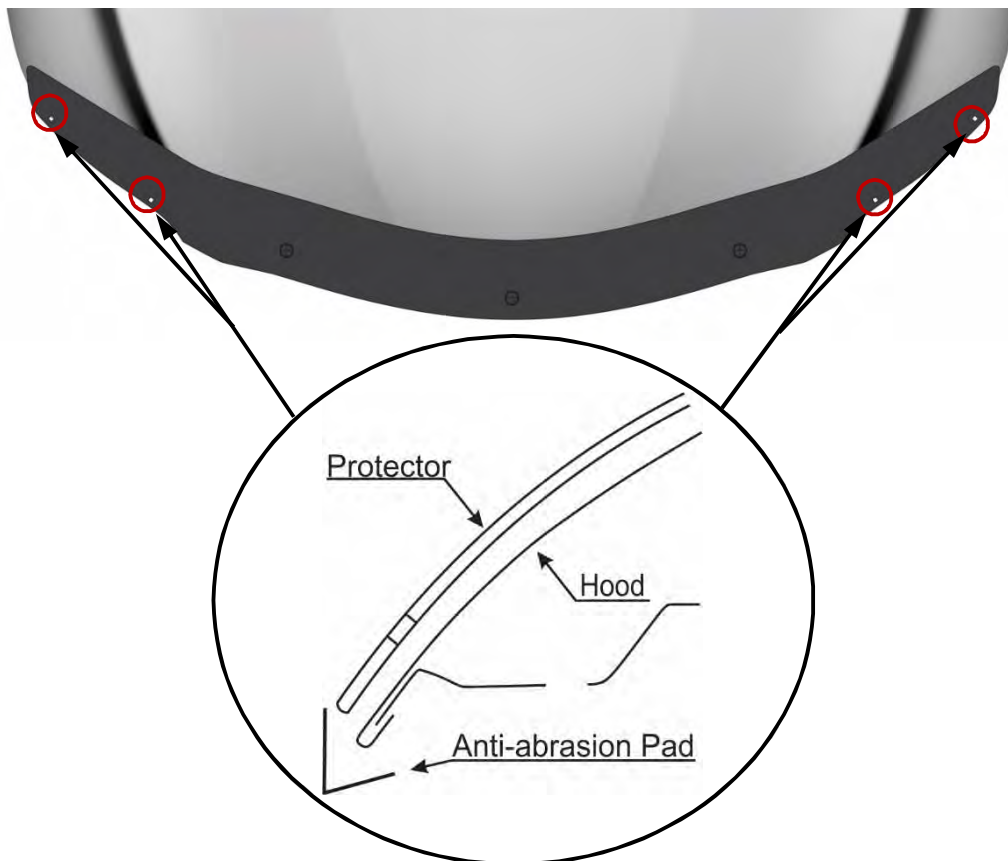


8. Peel and fold the remaining 4 anti-abrasion pads in half over the edge of the hood in line with the two holes in the protector over each of the headlights.

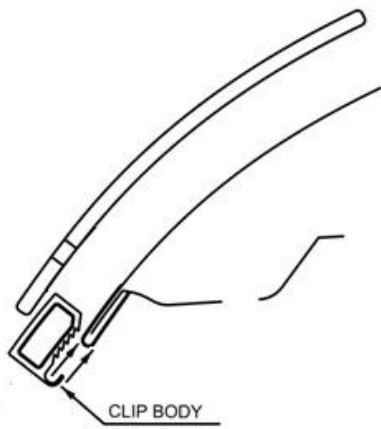

9. Place a clip body over one of the anti-abrasion pads on the edge of the hood.

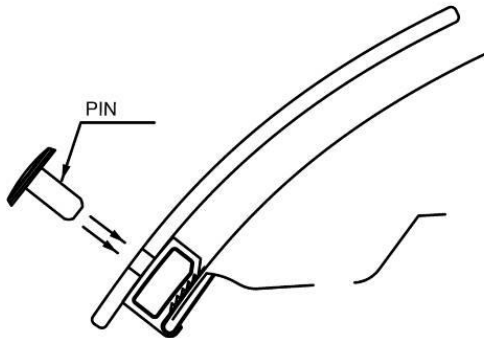


10. Insert a pin through the protector and into the clip body.

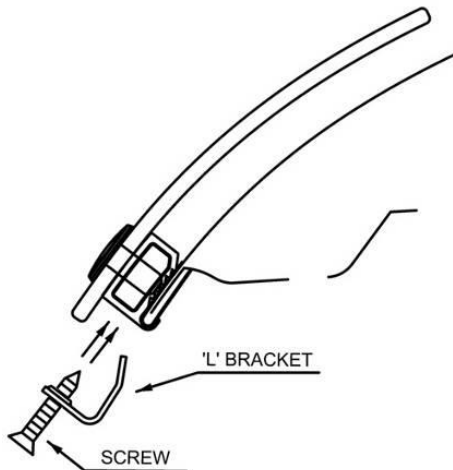

11. Start a screw through an L bracket and into the clip body a few turns.

12. Repeat steps 9-11 to the remaining 3 clip assemblies.

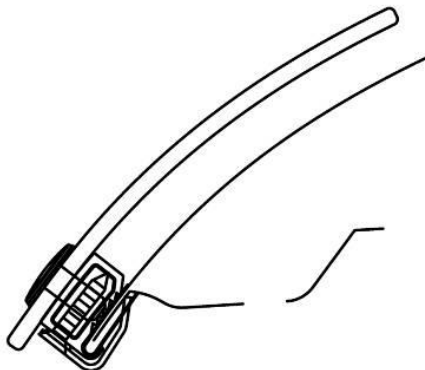

13. Make sure all the components are well seated together; the protector is centered on the hood, and, starting at the innermost clip locations, finish tightening the screws into the clips. *Do not overtighten.*

On some vehicles it may be necessary to adjust the hood bumpers and/or latch for proper clearance.

CARE INSTRUCTIONS

- Clean the protector with a mild soap and water solution or plastic cleaner only. Do not use chemicals or solvents.
- Periodically check to make sure the Bumpons are in place and the protector is secure.
- Do not pull on the protector when opening or closing the hood.