


FORM FIT Hood Protector

Installation Instructions

HD 10G13
Hyundai Santa Fe (2013-2018)

PARTS LIST

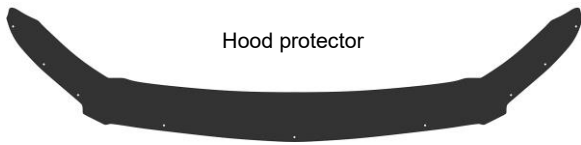


Clip bodies (6)



Pins (6)



Screws (6)



Metal "L" brackets (6)



Anti-abrasion pads (8)




Small bumpons (2)



Large bumpons (3)



Metal brackets (2)

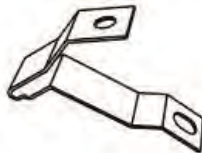

Push-type retainers for top of hood (2)



Push-type retainers for underside of hood (2)




TOOLS AND SUPPLIES REQUIRED


- Tape Measure
- Phillips Screwdriver # 2


- Make sure the vehicle is clean and completely dry before installation.

1. Install the bumpons as shown. Attention: Bumpons must be installed on the hood, not on the protector. If the bumpons are installed on the protector, they may wear through the paint.

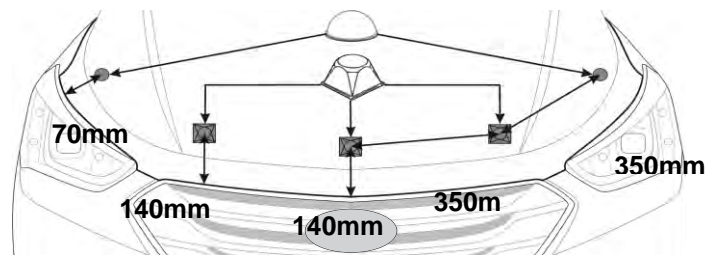


2. Open the hood of the vehicle. Peel and fold an anti-abrasion film pad in half over the edge of the hood, in the locations shown.

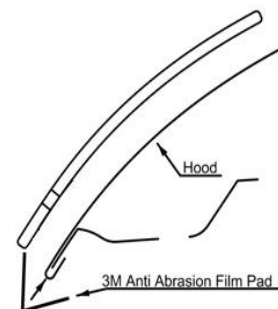


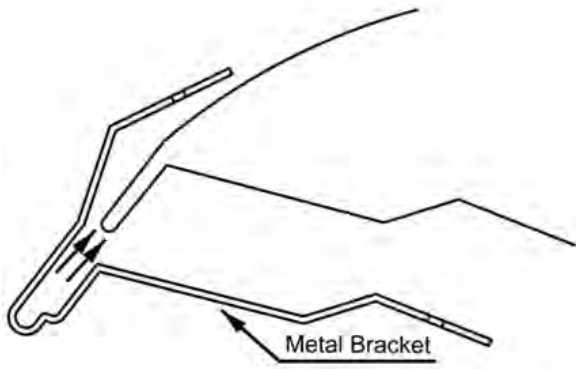


3. Install Metal Brackets over the anti-abrasion film pads installed in the previous step. Align the hole in the bottom leg of the bracket with the round hole in the hood. *See Illustration.*

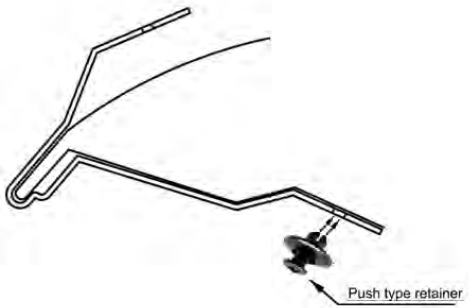


4. Insert a push type retainer designed for the underside of the hood through the metal bracket and into the round hole in the hood. Tighten the screw. *See Illustration.*

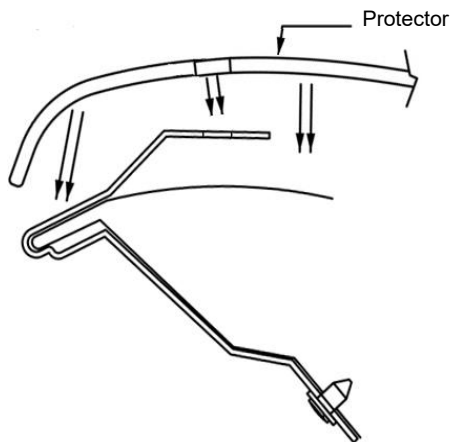


5. Place the protector onto the metal brackets.

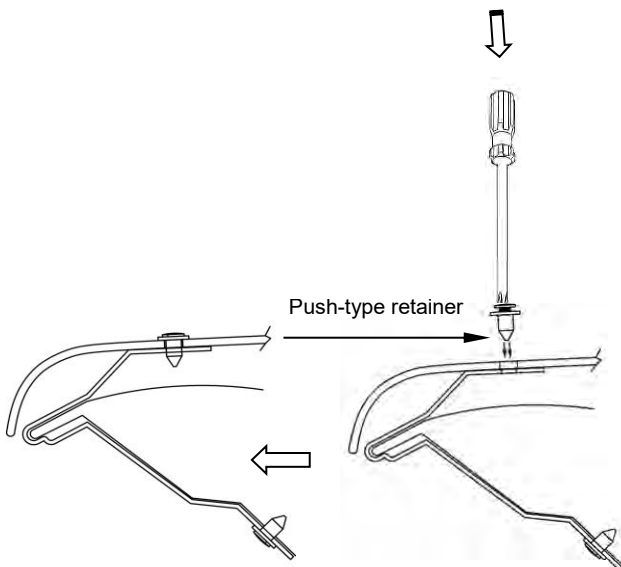


6. Align the 2 centre holes in the protector with the holes in the two metal brackets. Insert a "push-type retainer" through the hole in the protector, and into the bracket. Push the center pin of the retainer assembly to lock it into place.

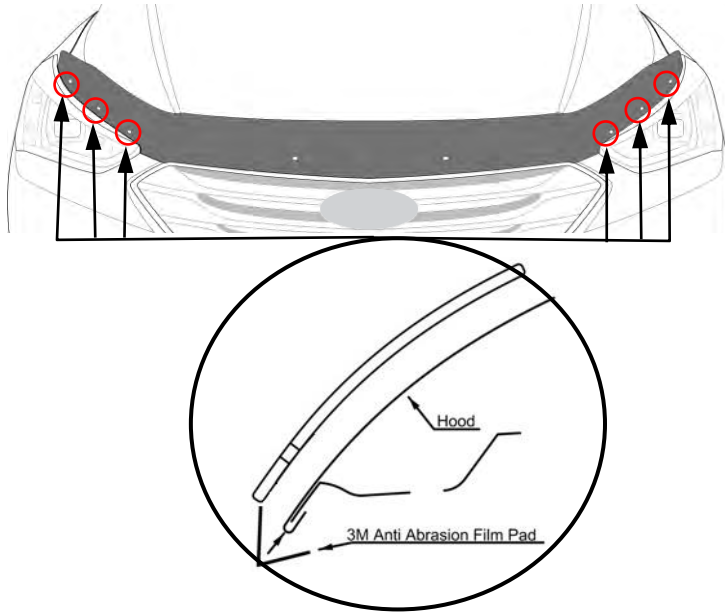


7. Peel and fold an anti-abrasion pad in half over the edge of the hood in alignment with the holes in the protector at the six locations over the headlights.

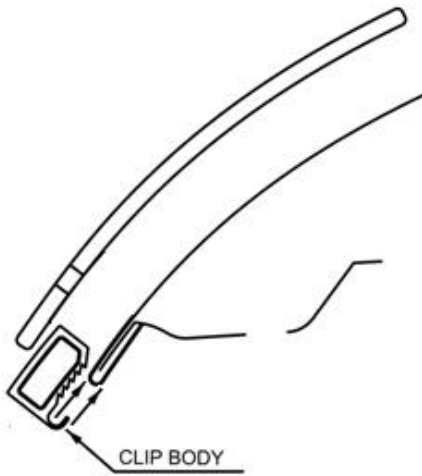


8. Place a clip body over each of the anti-abrasion pads on the edge of the hood.

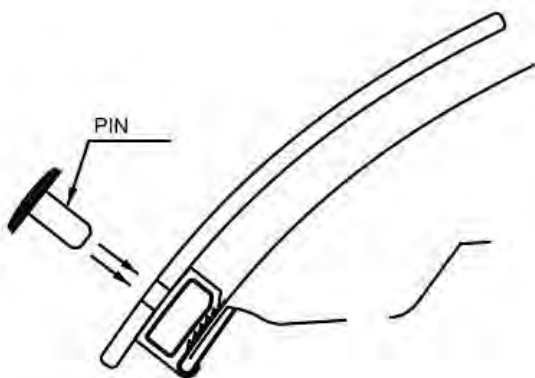

9. Insert a pin through the protector into each of the clip bodies.

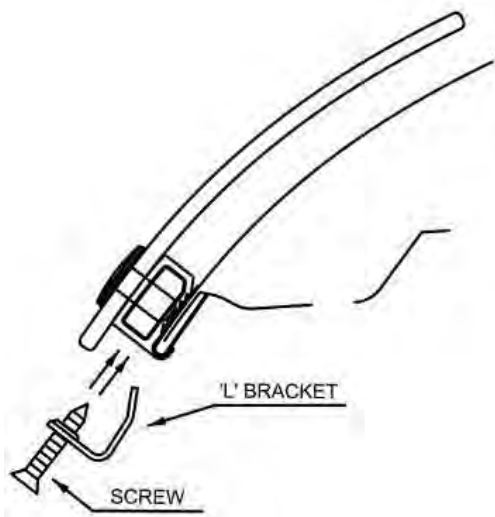

10. Insert a screw through an 'L'- bracket and into the clip body.

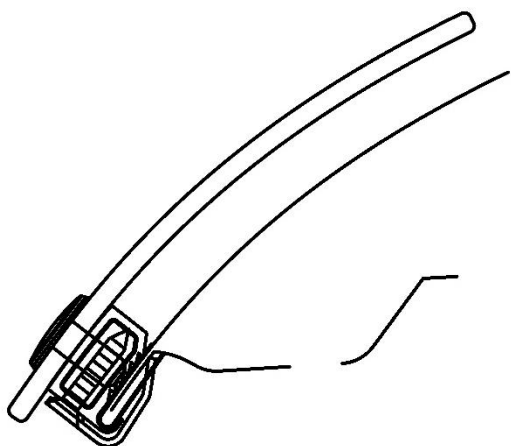

11. Make sure all the components are well seated together and the protector is centered on the hood, then tighten the screws into the clips.

Thank you for the purchase of a **FORMFIL** Hood Protector.

If you have any questions regarding the product, please email us at customer@focusauto.com.

Care Instructions

- Clean the protector using a mild soap and water solution or plastic cleaner only.
- Avoid using automatic car-washes. Touch-less style automatic car-wash equipment are less likely to damage the protector.
- Periodically check to confirm the protector is securely attached to the hood.
- Do not pull/push on the protector when opening or closing the hood.