

FORM FIT Hood Protector

Installation Instructions

HD 5N17

Chevrolet Silverado HD 2500/3500
(2017-2019) - Diesel Only

HARDWARE KIT

- 5 – Bumpons
- 8 – Abrasion pads
- 8 – Mounting clips
- 8 – Pins
- 8 – Screws
- 8 – 'L' Brackets
- 1 – 48" length "D" gasket
- 1 – Automotive surface cleaner

TOOLS REQUIRED

- 1 – Phillips Screwdriver # 2
- 1 – Tape Measure


NOTE

- Ensure the area on the hood where you'll be installing the hood protector is clean and dry prior to installation.


INSTALLATION INSTRUCTION

1. Install the (5) bumpons on the hood as shown in **illustration #1**. Note: If bumpons are installed on the protector they will wear through the paint.


ILLUSTRATION #1 – BUMPON LOCATION

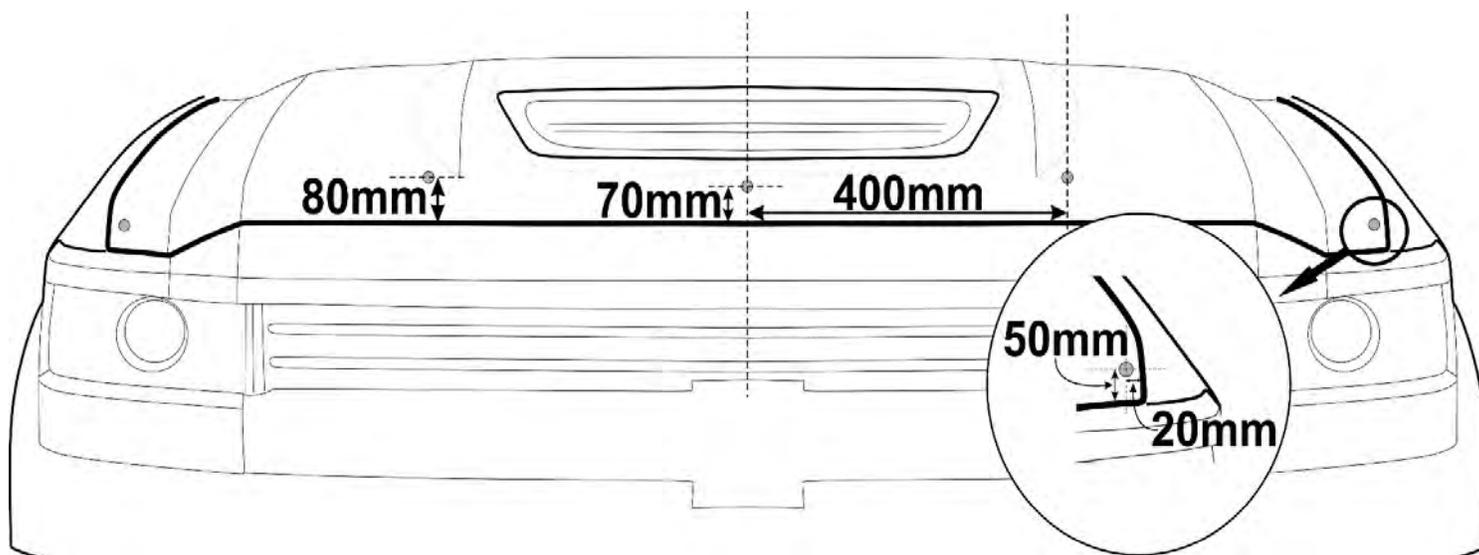

2. Clean the area indicated in the illustration to a point approximately 24" on each side of the center of the hood.

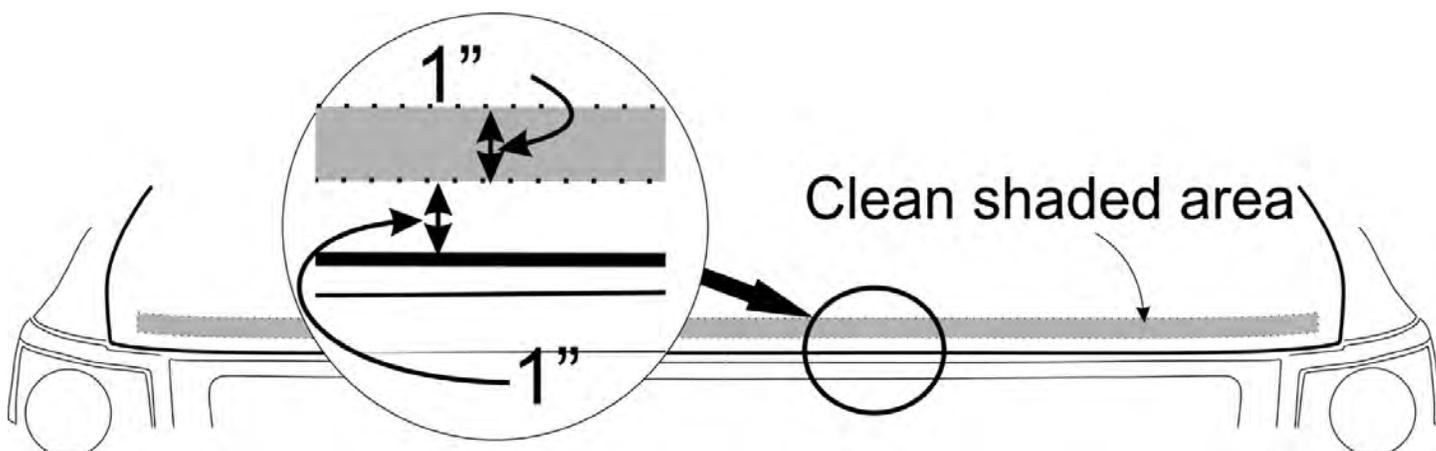


3. Center the "D" gasket laterally on the hood. 48" is provided. It may be necessary to trim the length slightly to fit the contours of the hood.
4. The "D" gasket installs approximately 1" up from the hood edge. Once its position has been established, peel a small length of the protective backing and place the gasket in position on the hood. **Do not peel the full length of backing off.** The adhesive is very sticky and once it sticks to something it is very difficult to remove. Peel 3 or 4 inches at a time and press down as you peel.

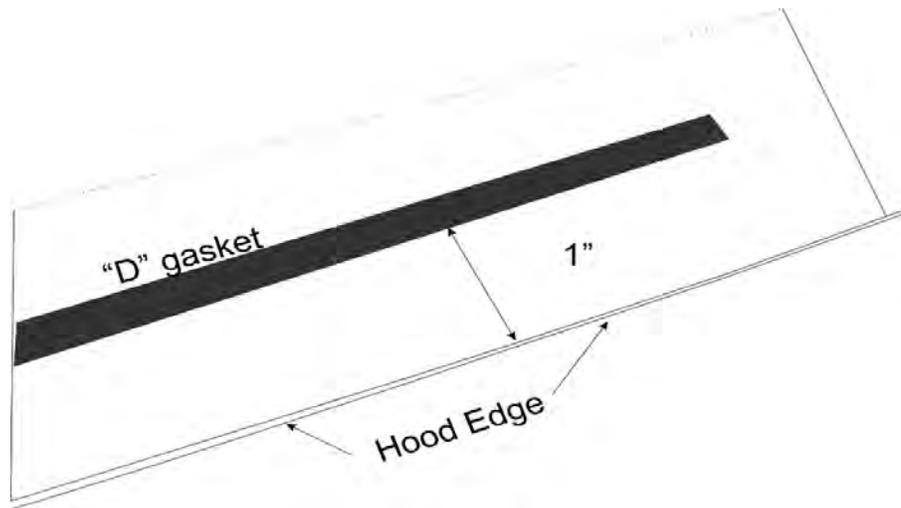

5. Insert a pin through the each of the (6) holes in the hood protector above the grill and into a mounting clip. **See illustration #2 – Step 5.**
6. Center the protector on the hood and rest it on the bumpons and mounting clips.
7. Peel and fold (6) abrasion pads in half over the edge of the hood under the (6) mounting clips. **See illustration #2 – Step 7.**
8. Starting with the innermost locations, insert a screw through an "L" bracket and into each of the (6) mounting clips. **See illustration #2 – Step 8.**
9. Ensure all components are properly seated together and the protector is centered on the hood. Tighten the screws into the mounting clips. **See illustration #2, step 9.**
10. **Repeat steps #5, 7, 8 and 9 for the remaining (2) holes over the headlights.**
11. On some vehicles it may be necessary to adjust the hood bumpers and/or latch for proper clearance.

ILLUSTRATION #2 – CLIP CONFIGURATION – PATENT No. 6,892,427

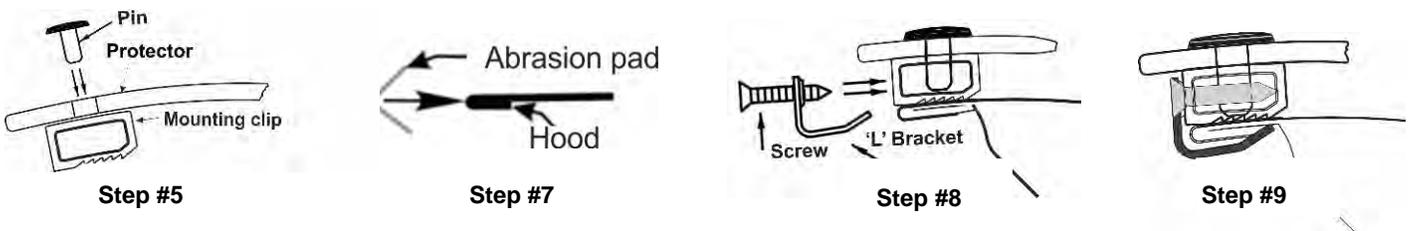

CARE INSTRUCTIONS

- Clean the protector with either a mild soap/water solution or utilize a plastic cleaner. Do not use chemicals or solvents.
- Periodically check to make sure the bumpons are in place and the hood protector is secure. Avoid using automatic car washes.
- Do not pull on the protector when opening or closing the hood.

Thank you for purchasing a **FORMFIL** hood protector. Please retain this sheet for care instructions and kit information.

If you have any questions regarding our product, please contact us via email at customer@focusauto.com or visit our website at www.formfithoodprotectors.com.

FORM FIT Protège-capot

Instructions d'installation

HD 5N17

Chevrolet Silverado HD 2500/3500
(2017-2019) - Diesel Uniquement

TROUSSE DE FIXATIONS

- 5 - Bumpons
- 8 - plaquettes d'abrasion
- 8 - Clips de fixation
- 8 - Goupilles
- 8 - Vis
- 8 - Supports 'L'
- 1 - 48 pouces joint d'étanchéité « D »
- 1 - Nettoyant de surface d'automobile

OUTILS REQUIS

- 1 - Tournevis Phillips # 2
- 1 - Ruban à mesurer


NOTE

- Assurez-vous que la zone du capot où vous allez installer le protecteur de capot est propre et sèche avant l'installation.


INSTRUCTIONS D'INSTALLATION

1. Assurez-vous que le capot est propre et sec à l'intérieur et à l'extérieur.
2. Installez les bumpons sur le capot comme indiqué dans l'illustration n ° 1. Attention: Si bumpons sont installés sur le protecteur qu'ils porteront à travers la peinture.


ILLUSTRATION N°1 – EMBLACEMENT DES BUTÉES ET DES FIXATIONS

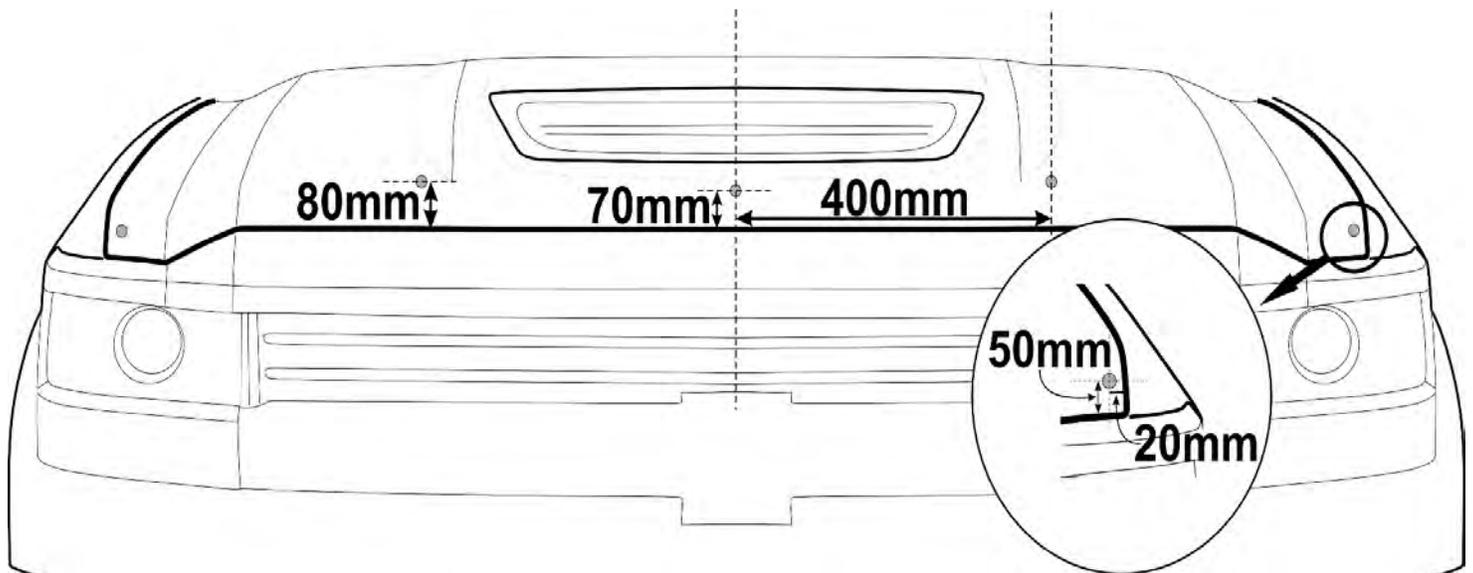

3. Nettoyer la zone indiquée dans l'illustration à un point situé à environ 24 "de chaque côté du centre de la hotte.

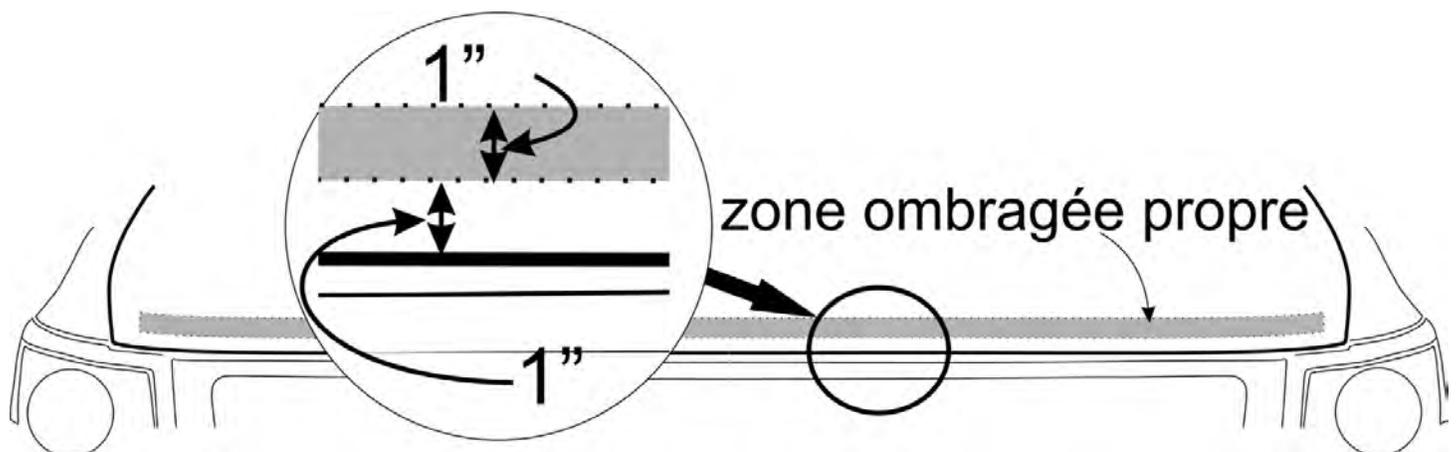


4. Centrez le joint "D" sur le côté du capot. 48 "est prévu. Il peut être nécessaire de couper légèrement la longueur pour épouser les contours du capot.
5. Le joint d'étanchéité "D" installe environ 1 "vers le haut à partir du bord du capot. Une fois que sa position a été établie, pelez une petite longueur de la feuille de protection et de placer le joint d'étanchéité en position sur le capot. **Ne retirez pas la longueur de reculer!** L'adhésif est très collant et une fois qu'il colle à quelque chose, il est très difficile à enlever. Peel 3 ou 4 pouces à la fois et appuyez que vous pelez.

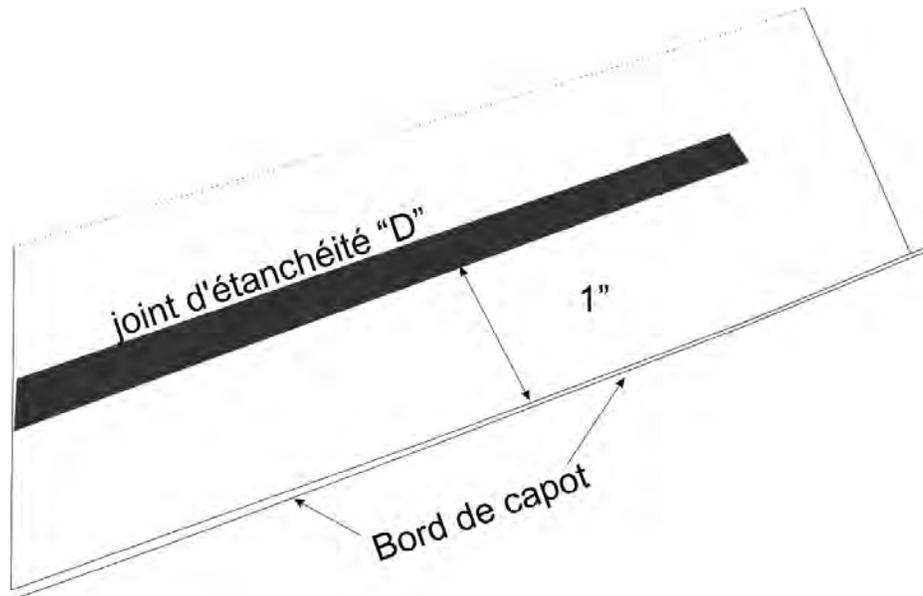


6. Introduire une goupille à travers le chacun des (6) des trous dans le capot de protection au-dessus de la grille et dans un clip de fixation. **Voir l'illustration # 2 - Etape 6.**
7. Centre le protecteur sur le capot et se reposer sur les bords et clips de montage.
8. Peel et plier (6) plaquettes d'abrasion dans la moitié sur le bord de la hotte sous les clips (5) de montage. **Voir l'illustration # 2 - Etape 8**
9. a) En commençant par les endroits les plus intimes, insérer une vis dans un "L" support et dans chacun des (6) clips de montage. **Voir l'illustration # 2 - Etape 9a.**
b) Se assurer que tous les composants sont correctement assis ensemble et que le protecteur est centrée sur le capot. Serrer les vis dans les clips de montage. **Voir l'illustration n ° 2, l'étape 9b.**
10. **Répétez les étapes # 6, 8, 9a et 9b pour les (2) trous restants sur les phares.**
11. Sur certains véhicules, il peut être nécessaire d'ajuster les pare-chocs de la hotte et / ou verrouiller un dégagement adéquat.


ILLUSTRATION N°2 – CONFIGURATION DE LA FIXATION – N° DE BREVET : 6,892,427

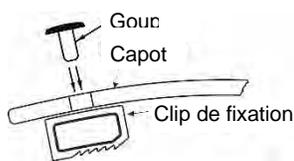


Etape #6



Etape #8

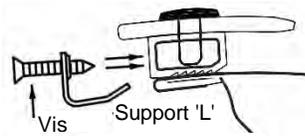

Etape #9a

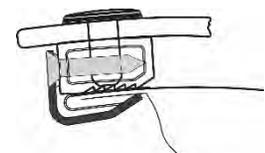

Etape #9b

INSTRUCTIONS POUR L'ENTRETIEN

- Nettoyez le protecteur avec une solution d'eau et de savon doux ou avec un nettoyant de plastique seulement. Ne pas utiliser de produits chimiques ou de dissolvant.
- S'assurer périodiquement que les butées sont toujours en place et que le protecteur est toujours bien retenu.
- Évitez de laver le véhicule dans les laves-autos automatiques.
- Ne tirez pas sur le protecteur lors de l'ouverture ou la fermeture du capot.

Merci d'avoir acheté une protection de capot **FORMFIL**.

Veuillez conserver cette notice pour les instructions d'entretien et les informations sur le kit.

Pour toute question concernant notre produit, veuillez nous contacter par e-mail à customer@focusauto.com ou consulter notre site web à l'adresse www.formfithoodprotectors.com.