




1

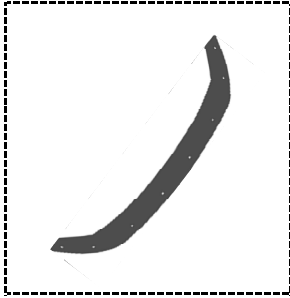


2

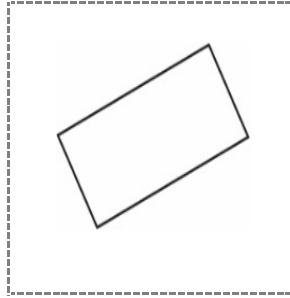


3

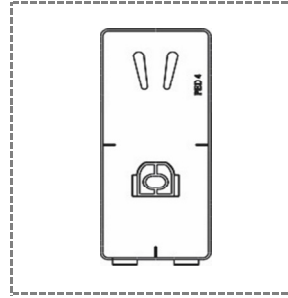

4

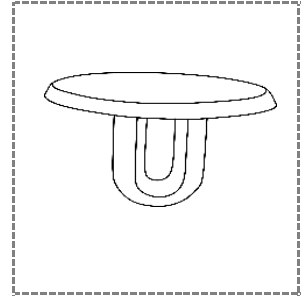


5

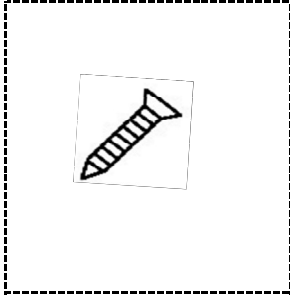


6




7

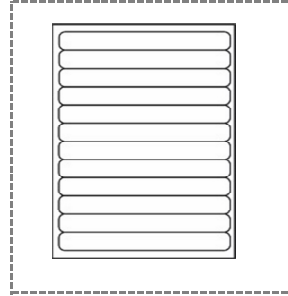

8

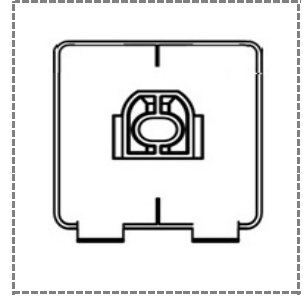


9

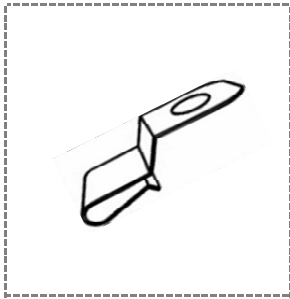

10




#	Qty.	Description	#	Qty.	Description
1	1	Hood protector	6	2	Bumpons
2	5	Anti-abrasion film pads	7	1	Re-useable tape strips
3	4	Large Adhesive pedestals	8	2	Small Adhesive pedestal
4	8	Pins	9	2	Metal mounting brackets
5	8	Screws	10	1	Surface Cleaner

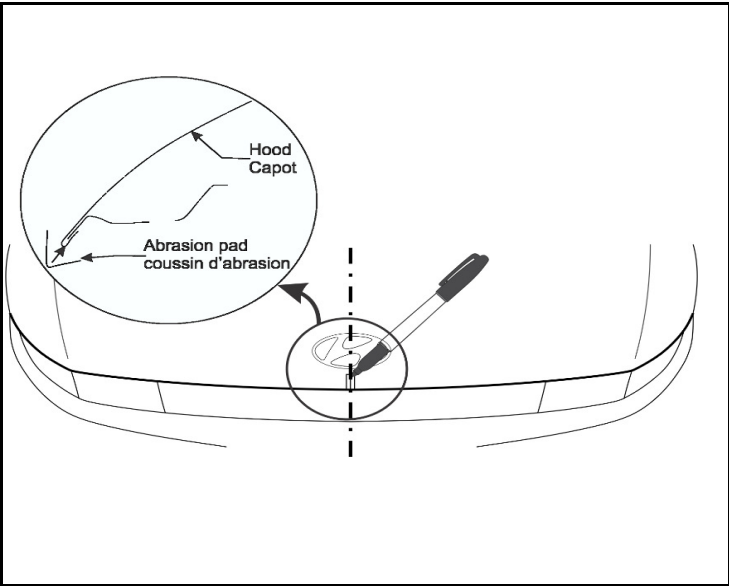

Mark hood center 1


NOTE Use the centre of the Hyundai logo to establish centre. Place an Anti abrasion pad at centre and mark it with a sharpie or wax pencil.

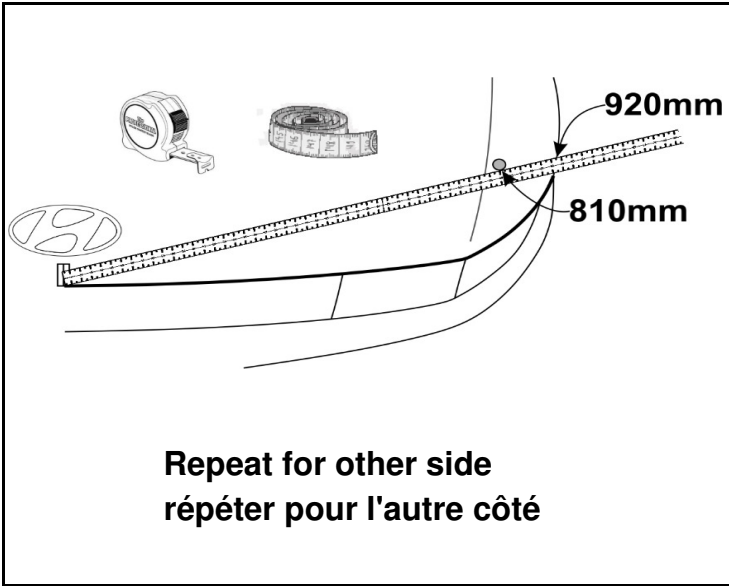

Install bumpons 2


NOTE Using the dimensions in the illustration, peel the protective backing from the bumpons and place them in position on the hood.

WARNING Bumpons must be installed on hood. If they are installed on the hood protector they may wear through the paint on the hood.

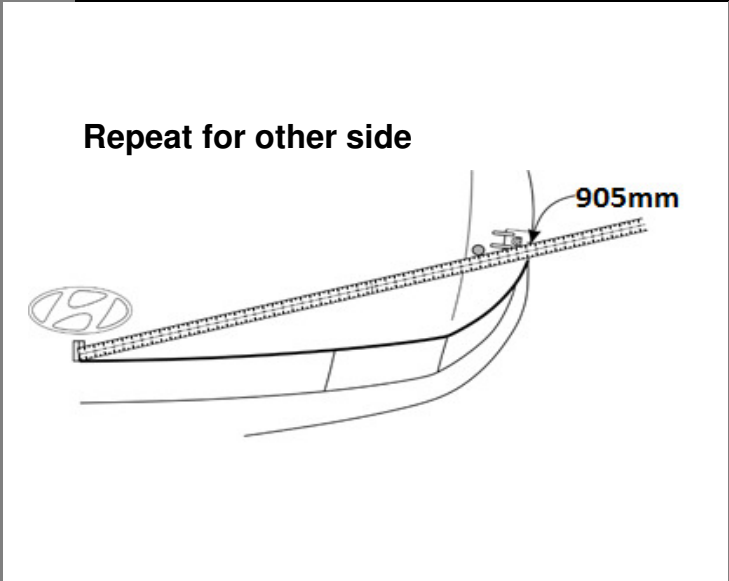


Temporarily position outer pedestals 3A

NOTE Using the repositionable tape strips, temporarily place a mounting pedestal in the position illustrated.

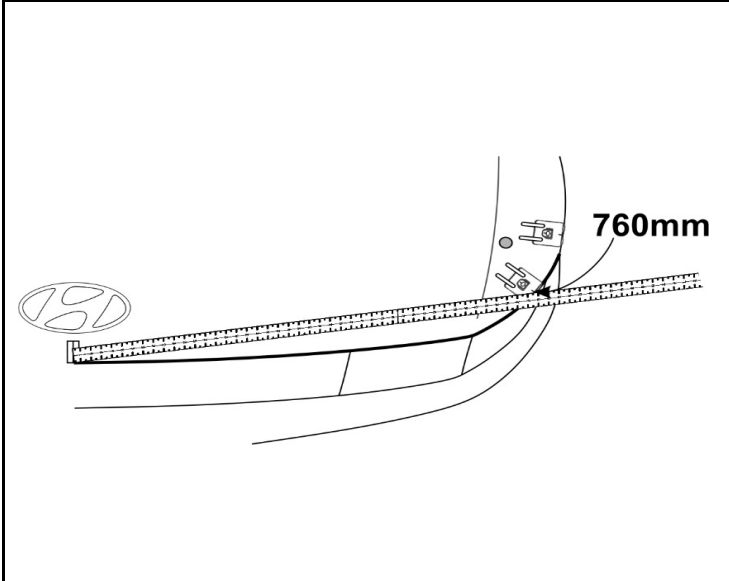

Temporarily position outer pedestals 3B

WARNING Proper marking and prepping of all pedestal locations is critical. Accurately installing them in the exact position is very important. Once attached, the pedestals are very difficult to remove - place them correctly the first time.

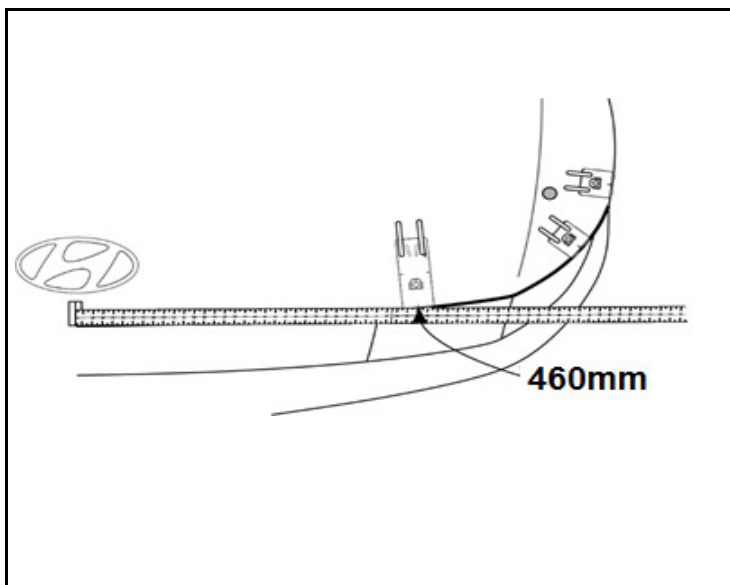


Temporarily fit large pedestals

4

NOTE

Using the repositionable tape strips, temporarily place a mounting pedestal in the position illustrated.

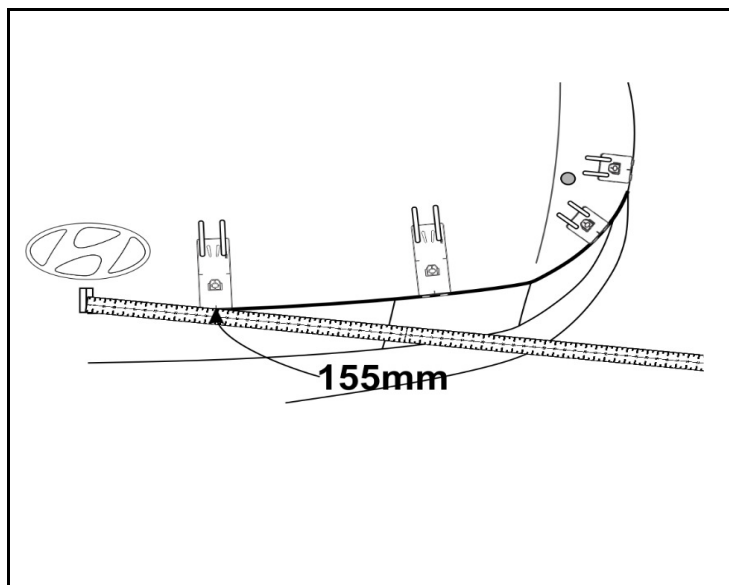


Temporarily fit large pedestals

5

NOTE

Using the repositionable tape strips, temporarily place a mounting pedestal in the position illustrated.

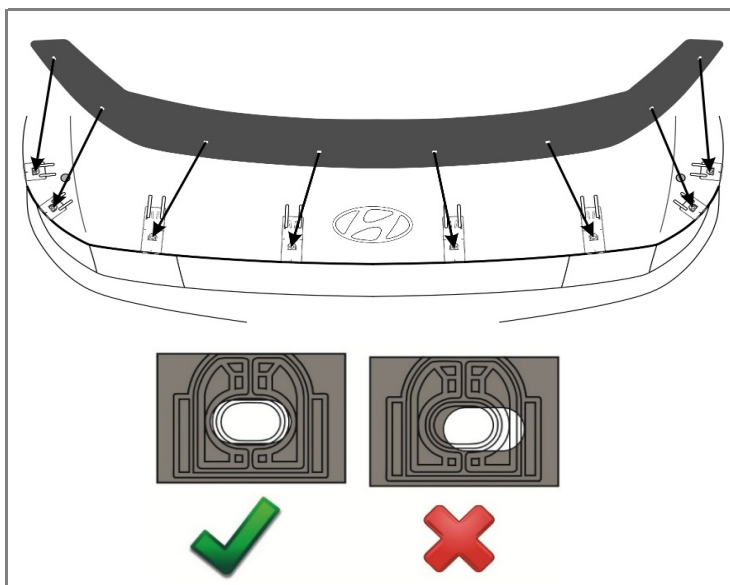


Test fit hood protector

6A

NOTE

Verify the holes in the protector align with the those in the pedestals.

If necessary, reposition the pedestals so all attachment positions are correct and the protector is well centered.

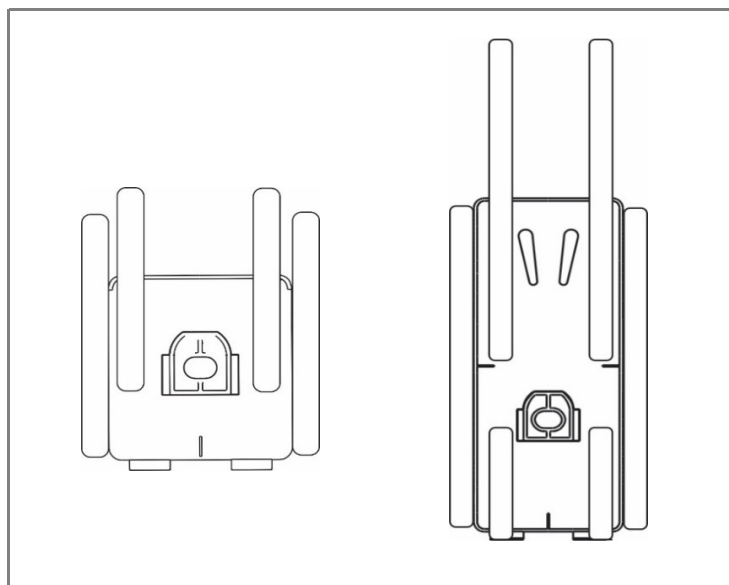

Protector Placement


6B

NOTE

Check that the holes in the protector are aligned with those in the pedestals.

If necessary, reposition the pedestals so that all mounting points are correct and the protector is centered.



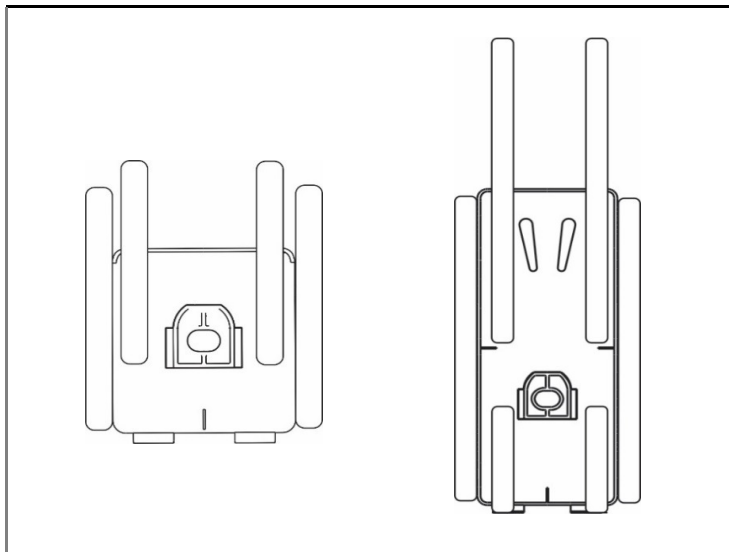


Outline pedestals

7

NOTE

Once the location of each pedestal has been established, outline its position with the supplied tape strips or masking tape.

Proper marking and prepping of all pedestal locations is critical. Accurately installing them in the exact position is very important. Once attached, the pedestals are very difficult to remove - place them correctly the first time.

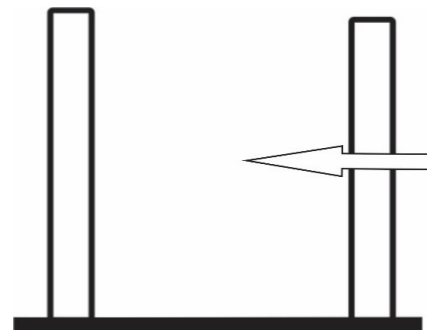

**AUTOMOTIVE
SURFACE CLEANER**

Directions: Untint wipe, apply on Surface and clean, allow to dry.

Warnings: For external use only.
Keep away from fire or flame.
Avoid contact with eyes or face.
Keep out of reach of children.
If swallowed get medical help or contact Poison Center immediately.

Ingredients: 70% Isopropyl alcohol


Clean the surface

8

NOTE

Remove the pedestal and thoroughly clean the outlined area with the surface cleaner. Wipe dry with a clean cloth or paper towel. This will insure all wax, finger prints and oils are removed from the hood surface in the bonding area.

Proper preparation of the hood surface will ensure maximum adhesive bond.

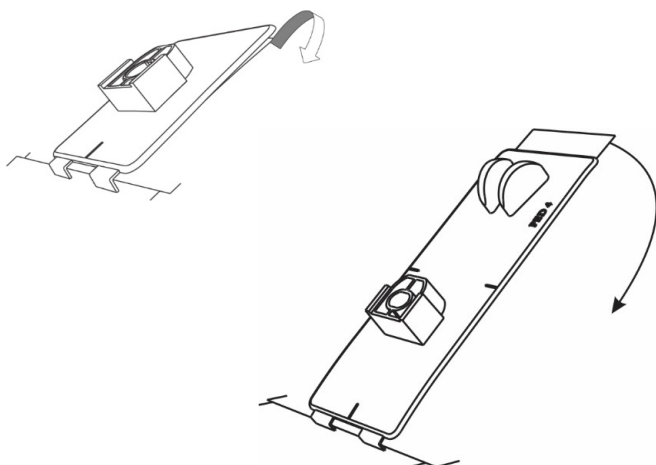


Attach pedestals

9A

NOTE

Remove the red backing from the adhesive and install on the hood surface.

Tip: Hook the fingers on the pedestal over the hood edge and rotate the unit into position. After installation, remove the tape strips and “wet out” the pedestal base by applying pressure with your thumb around the surface of the pedestals.

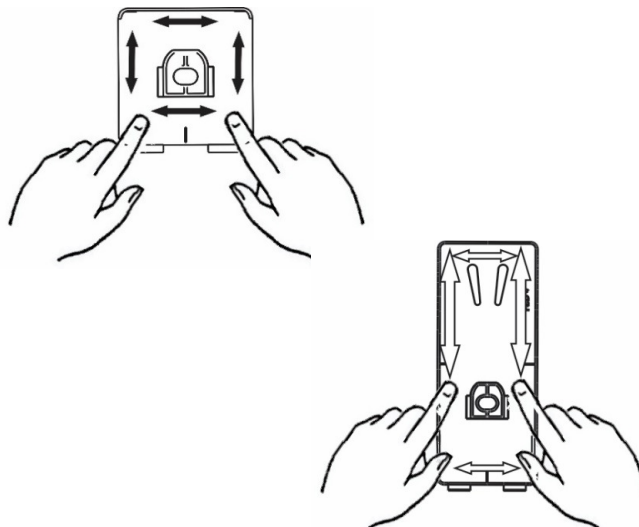


Attach pedestals


9B




Important: “wetting out” of the pedestal will ensure maximum adhesive bond.

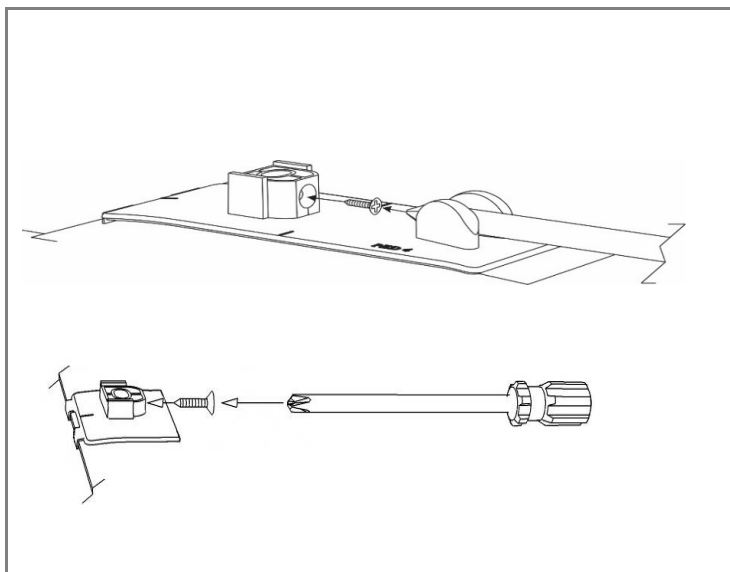


	Start screws	10
<div>NOTE</div>	<p>Start a screw into each pedestal a few turns. The tip of the screw must not protrude into the hole where the attachment pin will install later.</p>	

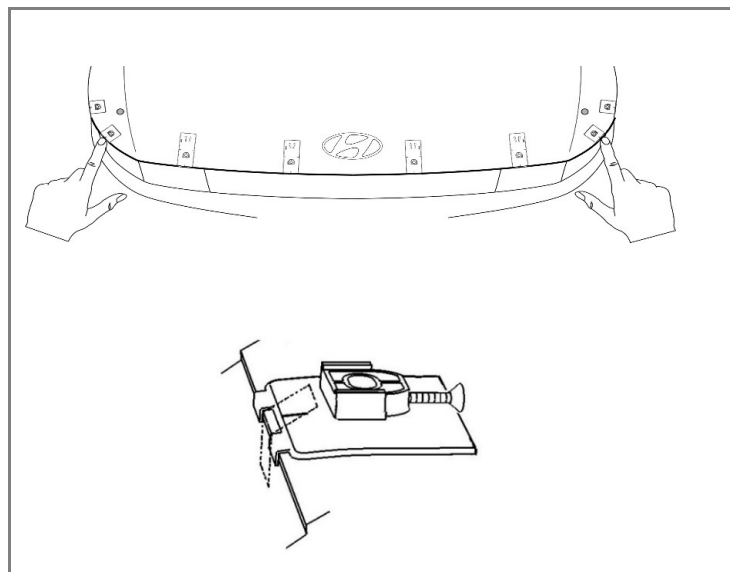

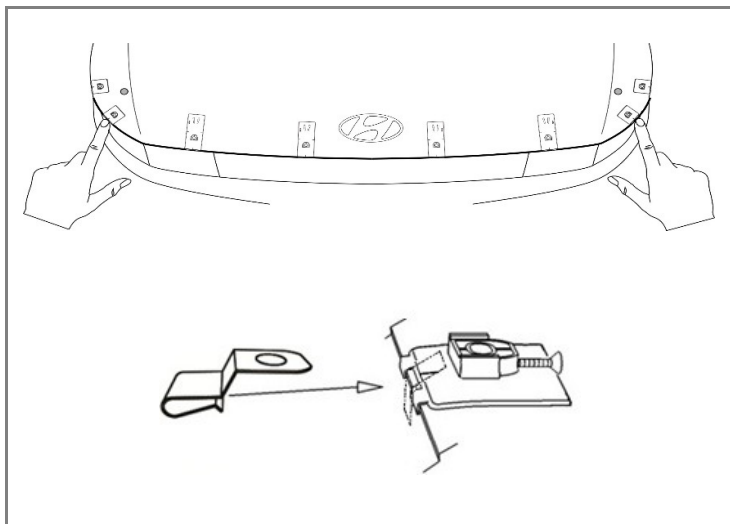


	Install anti-abrasion film	11
<div>NOTE</div>	<p>Peel and fold the anti-abrasion film pads in half over the hood edge between the fingers on each of the mounting pedestals. In the shown location.</p>	




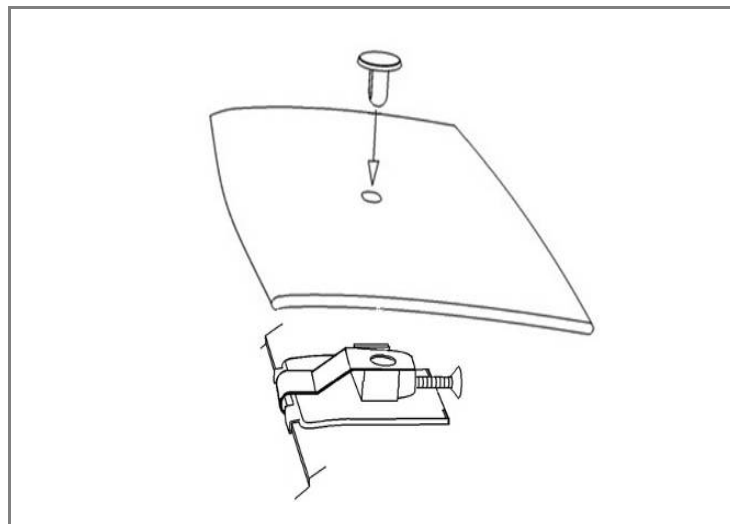

	Install metal brackets	12
<div>NOTE</div>	<p>Push metal mounting brackets over the hood edge aligned with the anti-abrasion pads. Ensure the bracket is fully seated over the hood edge and the hole in the bracket is aligned with the hole in the pedestal. In the shown location.</p>	

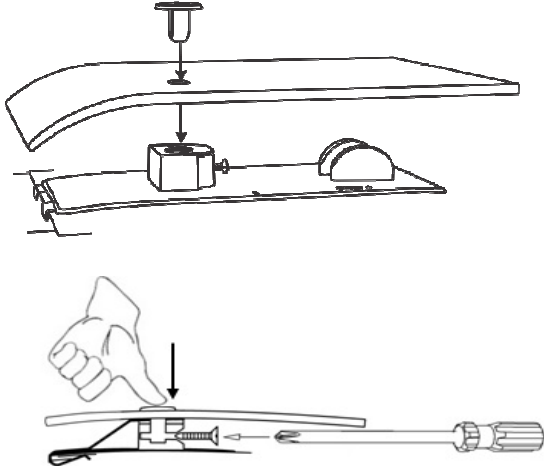

	Install pins	13
<div>NOTE</div>	<p>Install a pin through the protector and into the pedestals.</p>	

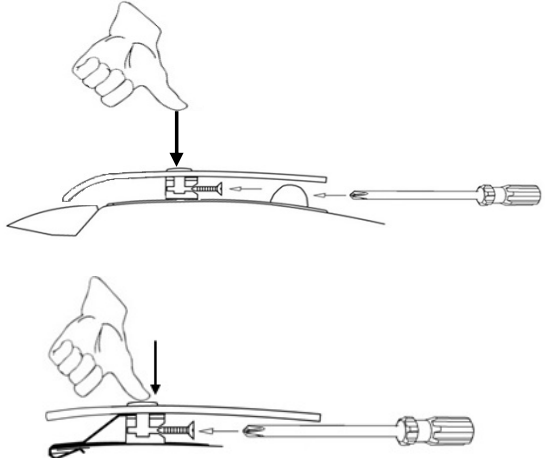		
	Partially tighten the screws	14
NOTE	Maintain slight pressure on the pin to ensure proper seating of the components, while simultaneously tightening the screw a few turns. Repeat for remaining pedestal locations.	
	Only partially tighten the screws to make sure minor alignment is allowed.	

		
	Finish tightening the screws	15
NOTE	<i>Confirm protector is centered on hood. Starting at the center location tighten all the screws that were loosely installed.</i>	
	Caution: Do not overtighten screws	